



A20-Mini

Digital Transmitter

User Guide

Table of Contents

| | | | |
|----|---|----|--|
| 3 | Welcome to the A20-Mini | 23 | Recording WAV Files on A20-Mini |
| 4 | Panel Views | 24 | Jamming Timecode on A20-Mini |
| 6 | Power | 25 | File Transfer to a Computer |
| 8 | A20-Mini Holster | 25 | Updating A20-Mini Firmware |
| 9 | Introduction to A20-Remote | 26 | SD-Utility |
| 10 | A20-Remote Overview | 26 | Installing SD-Utility |
| 12 | Manage Transmitters | 26 | Importing A20-Mini WAV Files into SD-Utility |
| 12 | Pairing an A20-Mini with A20-Remote | 27 | Removing WAV files from the Source Window |
| 12 | Enabling A20-Mini Transmitters for Control | 27 | Organizing Source Files |
| 12 | Power Off from App Requires Confirmation | 27 | Selecting Files to Export |
| 12 | Country | 27 | Naming of Processed WAV Files |
| 13 | Transmitter List | 27 | Creating Shorter WAV Files Based on Timecode Range |
| 15 | Transmitter View | 28 | Conforming A20-Mini WAV Files to CSV Sound Reports |
| 16 | Controlling an A20-Mini from A20-Remote | 28 | Selecting Bit Depth of Processed WAV Files |
| 16 | Transmitter Controls (Power, Record, Stop) | 28 | Combining to Poly |
| 16 | Transmitter Menu | 29 | PowerStation-8M |
| 17 | Naming the A20-Mini | 30 | PowerStation-8M A20-Mini Extraction Tool |
| 17 | Setting Frequency | 31 | PowerStation-8M Specifications |
| 17 | Setting RF Power | 32 | A20-Mini Specifications |
| 18 | Mode | 33 | Antenna Guide |
| 18 | Mute Mic | 34 | Legal Notices |
| 18 | LEDs | 34 | FCC Compliance Statement |
| 18 | Formatting Media | 35 | IC Compliance Statement |
| 18 | Modulation | 35 | WEEE Statement |
| 18 | A20-Mini Information | 35 | Battery Advisory |
| 19 | Options | 36 | Declaration of Conformity |
| 19 | Auto Power On When Removed from the PowerStation-8M | 37 | Servicing the A20-Mini |
| 19 | Auto Power with Lav Mic Connection | 37 | Warranty |
| 19 | Resume Record State Upon Powering On | 37 | Included Accessories |
| 19 | Allow Extra High - 40 mW RF Power | 37 | A20-Mini User Guide Revision List |
| 19 | Restore Defaults | | |
| 20 | Group Control | | |
| 20 | Group Setup | | |
| 21 | Group View | | |
| 22 | Group Status Screen | | |
| 22 | Group Menu | | |
| 22 | Connecting Lavalier Microphones to A20-Mini | | |
| 23 | Tuning A20-Mini and the Audio Ltd A10-RX | | |
| 23 | GainForward | | |
| 23 | Adjusting Audio of the A20-Mini Signal from the A10-RX | | |
| 23 | Adjusting Audio of the A20-Mini Signal from the 8-Series or 688 | | |

Welcome to the A20-Mini

Sound Devices' first miniature transmitter incorporates state-of-the-art features such as full remote control via the A20-Remote app, GainForward Architecture, internal 32-bit float recording, a worldwide tuning range of 470 MHz – 694 MHz, and more. The A20-Mini is fully compatible with Sound Devices' existing A10 Digital Wireless System.

- Full remote control of the Mini via A20-Remote companion app. Control frequency and RF power, turn the Mini on and off, start and stop recording, mute the microphone, format the media, view the status of all your Minis, and more.
- Create a custom group or use the all transmitters group to change settings on multiple A20-Minis at once.
- GainForward Architecture: set the Mini's gain levels via trim control (with an 8-Series) or at the A10-RX (other mixers).
- Full 10 Hz – 20 kHz audio bandwidth; 100% digital RF modulation and transmission. Same excellent range and audio quality as the A10-TX.
- Worldwide tuning range of 470 MHz – 694 MHz.
- Built-in 32-bit float, 48 kHz recorder with 64 GB storage for over 80 hours of record time.
- Offload recorded WAV files via USB-C and optionally conform/convert with SD-Utility.
- Powering via AAA or NP-BX1 (Li-Ion) with built-in charging for NP-BX1 Li-Ion battery.
- Internal supercapacitor-powered timecode generator can be jammed via USB-C.
- Water-resistant with a rounded form factor.

Conceal...

The A20-Mini digital wireless transmitter combines legendary British audio quality with the best of American design. The sleek, rounded form fits perfectly into body contours and underneath tight clothing.

...and control.

Control the A20-Mini from your phone or tablet via Bluetooth 5.2 with companion app A20-Remote. Set frequency and RF power, turn the Mini on and off, start and stop recording, mute the microphone, format the media, view the status of all your Minis, and more. The A20-Mini's high-efficiency internal 2.4 GHz antenna ensures excellent Bluetooth range.

Longest range.

With v5.00 firmware, the A10/A20 Wireless System delivers the longest transmission distance of any system on the market.¹ The state-of-the-art, 100% digital long-range modulation offers the same great audio quality (10 Hz – 20 kHz) as our Standard modulation scheme with a longer range for both line-of-sight and heavy multipath transmission.

Powerful group controls.

All transmitters can be powered up and down simultaneously or made to start and stop recording with a single tap from your smartphone or tablet. Use A20-Remote to create custom groups with selected transmitters or use an automatically-created all-transmitter group. You can also use groups to change RF Power, Mode, Modulation, Mute Mic, Format Media, and LED settings on multiple A20-Minis at once.

GainForward.

With the Mini's GainForward Architecture, easily set the Mini's gain, low-cut, and limiter directly on your 8-Series. This immediate, local control of gain allows quick adaptation to changing volume levels and saves time during production.

32-bit float recording.

The A20-Mini records in 32-bit float for an astounding >130 dB of dynamic range. This allows for audio gain decisions to be made after recording, with zero loss in headroom or noise performance.

Built-in 64 GB media.

No more SD card management – the ample-sized media stores more than 80 hours of continuous, uncompressed 32-bit float recording. Simply offload the recorded WAV files via the high-speed USB-C port to a computer.

Never lose time.

The Mini's ultra-accurate 0.2 ppm internal timecode generator can be jammed via USB-C with negligible drift over a 24-hour period.

Flexible, worldwide operation.

With a built-in 470 MHz to 694 MHz UHF tuning range, your Mini can go wherever work takes you.

Power away.

Use off-the-shelf rechargeable or AAA batteries – no adapter needed. 3 AAA batteries or a rechargeable Sony NP-BX1 give you the ultimate in powering flexibility. You can even recharge the NP-BX1 via the Mini's USB-C.

Water-resistant.


With its extensive gasketing and waterproof connectors, the A20-Mini can easily withstand water and sweat.

PowerStation-8M

Optional accessory provides easy battery charging, file transfer, and timecode jamming of up to eight A20-Minis at a time. Powered via DC (TA4) or USB-C (USB-PD).

¹ When comparing systems with same transmit power, same antennas, and same transmission frequency.

Panel Views

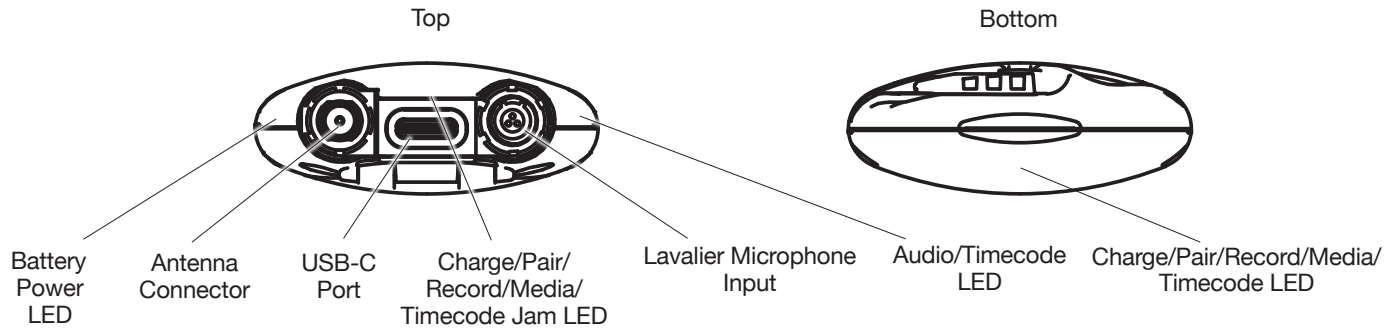

Battery Power LED

Indicates the state of battery life.

- Green = Good
- Orange = Marginal, about an hour of battery life remaining.
- Red = Low, 15-20 minutes of battery life remaining.
- Flashing Red = Critically low, RF, audio, and recording disabled.
- Blue = Batteries inserted. Power LED is blue when batteries are inserted and goes off when the unit is ready to be powered on by the red button or from the A20-Remote app.

Antenna Connector

SMA connector. Attach antenna with a length specific to the frequency in use. Using the wrong length of antenna reduces RF range. See Antenna Guide for more information.

USB-C Port

Multifunction port used for:

- Powering A20-Mini
- Charging internal Sony NP-BX1 rechargeable battery (not included)
- Timecode input and output
- Transferring files to and from a computer

Charge/Pairing/Record/Media/Timecode Jam LED

Indicates charging, Bluetooth pairing, recording, media activity, and timecode status.

- Solid Orange = Charging
- Solid Green = Charging complete
- Off = No charging
- Solid Red = Recording
- Flashing Red = Recording stopped due to full media or recording error
- Flickering Blue = Media activity
- Flashing Blue = Timecode Jam in progress
- Pulsing Blue = Timecode Output active
- Rapid Flashing Blue = Bluetooth Pairing

Lavalier Microphone Input

3-Pin LEMO connector for connecting a lavalier microphone. Can be set to power transmitter on and off via lav mic connection and disconnection.

Audio/Timecode LED

Audio/Timecode LED indicates audio activity and timecode status.

- Green (variable intensity) = Audio activity from lavalier microphone
- Red = Microphone clipping
- Solid Blue = Microphone is muted
- Pulsing Blue = Timecode 00 frame (only when unit is off)


Note: Due to the high dynamic range of the microphone input, under normal use the audio LED should never light up red. If it does, this is an indicator that the microphone itself (not the mic preamp) is clipping and the audio level should be attenuated acoustically by moving the mic capsule or using a lower sensitivity microphone.

Bottom Panel Charge/Pair/Record/Media/Timecode LED

LED indicates charging status, timecode sync, Bluetooth pairing, recording, and media activity. Positioned on the bottom of the A20-Mini to make it easily visible when slotted into the optional PowerStation-8M.

- Solid Orange = Charging
- Solid Green = Charging complete
- Off = Not charging
- Solid Red = Recording
- Flashing Red = Recording stopped due to full media or recording error
- Flickering Blue = Media activity
- Flashing Blue = Timecode Jamming
- Pulsing Blue = Timecode 00 frame (when unit is off and jammed timecode is held or when Timecode Output is active following a jam)
- Rapid Flashing Blue = Bluetooth Pairing

Left, Front, Right, Back Panels

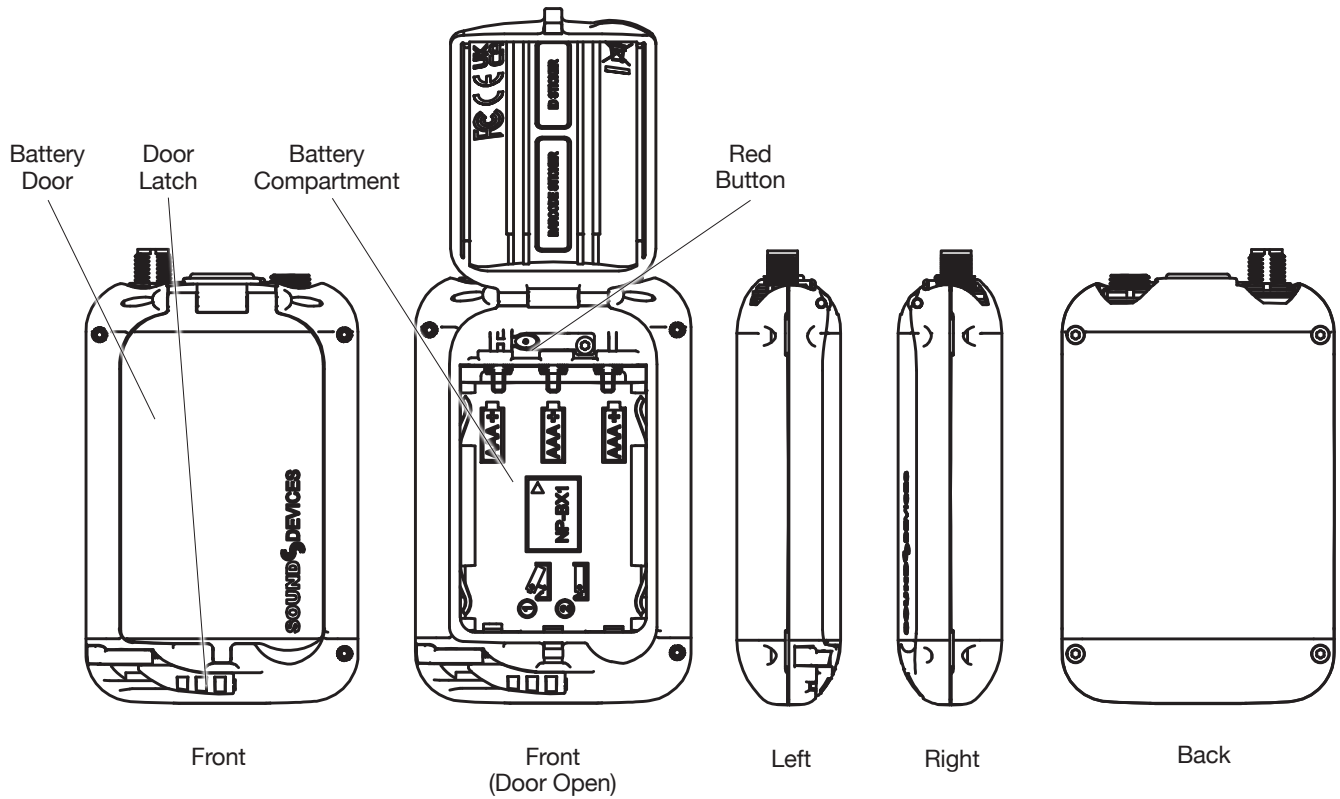

Battery Door

Access to the battery compartment and red button.

Door Latch

Slide left to unlock the battery door.

Battery Compartment

Accepts either 3x AAA Lithium batteries or one rechargeable Sony NP-BX1 Li-Ion battery. Sound Devices recommends using genuine Sony NP-BX1 or Energizer AAA Lithium primary batteries for best performance. Alkaline and NiMH are not recommended because of compromised run times.

Red Button

This button is used to power the A20-Mini on or off and enter Bluetooth Pairing mode.

- Power On = Press and release button.
- Power Off = Press and hold button for 3 seconds.
- Pairing Mode = While A20-Mini is off, press and hold button for 5 seconds. The Pairing LED on the bottom and top panel flashes blue rapidly while in Pairing mode.

Power

The A20-Mini powers via USB-C, 3x Energizer AAA Lithium primary batteries, or one Sony NP-BX1 Li-Ion battery.

Opening the Battery Door

To open the A20-Mini battery door:

1. Slide the door latch to the left to unlock the battery door.
2. Lift the battery door using the indented space on the bottom right-hand side of the battery door.

Closing the Battery Door

To close the A20-Mini battery door:

1. Slide and hold the door latch to the left.
2. Close the battery door.
3. Release the door latch to lock the battery door.

Powering from AAA or Sony NP-BX1 Li-Ion

To power the A20-Mini using AAA batteries or Sony NP-BX1 Li-Ion:

1. Open the A20-Mini battery door.
2. Insert three AAA batteries or one Sony NP-BX1 Li-Ion into the battery compartment, taking care to place the batteries in the correct orientation.
AAA batteries should be inserted with the negative side (without springs) first.
Sony NP-BX1 should be inserted with the contact side (with springs) first.
3. Power LED is blue when batteries are inserted and goes off when the unit is ready to be powered on. Press and release the red button to power on the A20-Mini.
4. Close the A20-Mini battery door.
5. To power off the A20-Mini, press and hold the red button for three seconds. The Power LED flashes rapidly while the A20-Mini powers off. The Power LED is off when the unit is off.
6. To remove the batteries, open the battery door and remove the AAA or NP-BX1 battery with the non-spring side first.

USB-C

USB-C can be used to power the A20-Mini and/or to charge inserted Sony NP-BX1 batteries. The A20-Mini does not charge AAA batteries. USB-C is the priority power source whenever connected.

To power the A20-Mini via USB-C:

1. Connect a USB power source to the A20-Mini's USB-C port.
2. Open the battery door then press the red button.
3. To power the A20-Mini off, press and hold the red button for three seconds.

To charge the Sony NP-BX1 from USB-C:

1. Open the battery door and insert a Sony NP-BX1 into the battery compartment.
2. Connect a USB power source to the A20-Mini USB-C port.
3. The Charge/Pair/Rec LED glows solid orange while the battery is charging. The Charge LED turns solid green when charging is complete.

The A20-Mini is fully operational when charging batteries from USB-C.

PowerStation-8M

The PowerStation-8M is an optional accessory for the A20-Mini. An A20-Mini using a Sony NP-BX1 battery can be inserted into a charging bay of the PowerStation-8M to charge the battery. See PowerStation-8M for more details.

Auto Power On and Off with PowerStation-8M

The A20-Mini automatically powers off when inserted into a charging bay of the PowerStation-8M. To save time from having to manually power on the A20-Mini, use the Power On When Removed from the PowerStation-8M feature. When this feature is selected, removing an A20-Mini from the PowerStation-8M immediately powers on the transmitter. This feature is turned on or off in the A20-Remote application. See A20-Remote for more details.

Auto Power with Lav Mic Connection

When Auto Power with Lav Mic Connection is selected, connecting a lavalier microphone to the A20-Mini automatically powers on the transmitter. Removing the LEMO connection automatically powers the A20-Mini off. This feature can be turned on or off in the A20-Remote application. See A20-Remote for more details.

Estimated Battery Life

The table to the right shows estimated battery rundown times in Hours:Minutes for Sony NP-BX1 Li-Ion and three Energizer Ultimate AAA Lithium primary batteries based on RF Power setting and whether the A20-Mini is recording.

Battery life is shown under continuous use and with an on/off time of 50% utilizing the A20-Mini's ability to power the unit on and off remotely from the A20-Remote app.

Estimated Battery Life

| RF Power & Record | Sony NP-BX1 | 3x AAA (Energizer Ultimate) |
|---------------------------------------|--------------------|------------------------------------|
| A20-Mini On, RF Power Off | 8:20 | 9:30 |
| RF Off, Recording, continuous | 8:00 | 8:10 |
| RF Off, Recording, on/off time of 50% | 16:00 | 16:20 |
| 2 mW, Recording, continuous | 4:30 | 5:10 |
| 2 mW, Recording, on/off time of 50% | 9:00 | 10:20 |
| 10 mW, Recording, continuous | 3:40 | 4:20 |
| 10 mW, Recording, on/off time of 50% | 7:20 | 8:40 |
| 20 mW, Recording, continuous | 3:30 | 4:00 |
| 20 mW, Recording, on/off time of 50% | 7:00 | 8:00 |
| A20-Mini Off | 6 months | 6 months |
| Charge Time PowerStation-8M | 2:00 | Not Supported |
| Charge Time USB 500 mA (A20-Mini Off) | 2:40 | Not Supported |

A20-Mini Holster

The A20-Mini ships with an easy-to-assemble holster. The A20-Mini can be inserted with the antenna and lavalier microphone coming out of the top or bottom of the holster.

Inserting the A20-Mini in the A20-Mini Holster

Slide the A20-Mini into the A20-Mini Holster's pocket in the orientation that works best for the situation. Fold the security flap over, securing the transmitter in place using the hook-and-loop fastener strips. Use the clip on the back of the holster to attach the transmitter to the talent's garments.



Introduction to A20-Remote



A20-Remote is an application for Android/iOS phones and tablets designed to pair with the A20-Mini. All settings for the A20-Mini are conveniently controlled using A20-Remote.

When connected via Bluetooth LE to the A20-Mini, A20-Remote offers control and display of all A20-Mini parameters, including:

1. Power on and off the A20-Mini
2. Monitor battery status
3. Frequency, Modulation, and RF power setup
4. Monitor audio signal presence
5. Microphone mute
6. Transport controls (Record, Stop)
7. Timecode display
8. Media formatting and monitoring of remaining space
9. A20-Mini settings (Mode, power options, and more)
10. Group control of powering, recording, and more

Download and install the A20-Remote app from the Google Play Store or Apple App Store.


<https://www.sounddevices.com/a20-remote>

A20-Remote has the following minimum operating requirements:


Android tablets and phones running Android 8+, or iPad and iOS devices running iOS 13+. The device must have Bluetooth and Location Services on in order to connect with an A20-Mini.

IMPORTANT: The mobile device's location is used to determine available frequencies, RF power levels, and TV channel mapping of the A20-Mini. The Country setting is automatically set using the mobile device's Location Services.

The mobile device's system date and time are used in the metadata of recorded files.

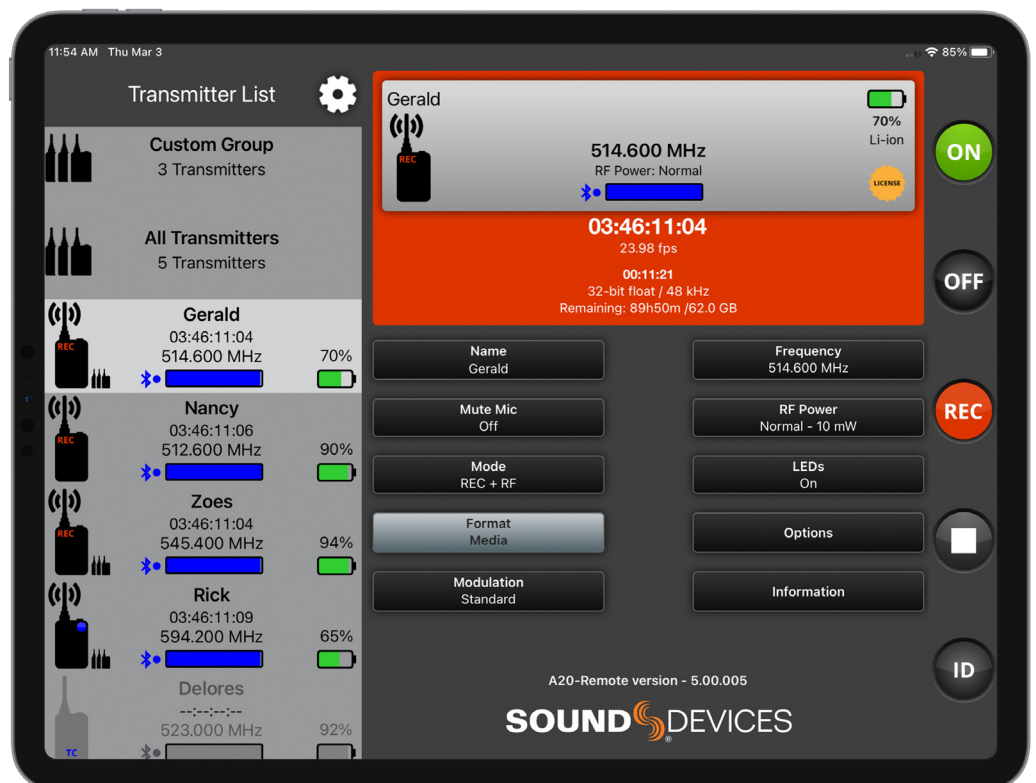

Phone View

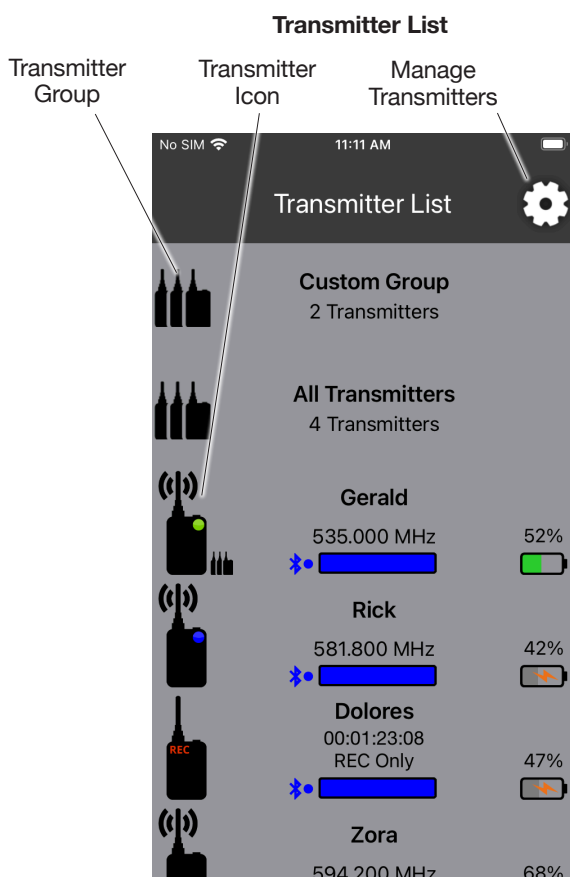

Transmitter List

Scroll to see all available transmitters in the Transmitter List. Touch a transmitter or transmitter group to display the Transmitter View or Group View. Transmitters that are enabled from Manage Transmitters appear in the Transmitter List. See Transmitter List for more details.

Manage Transmitters

Touch the Gear icon to access Manage Transmitters. From Manage Transmitters, pair transmitters, enable transmitters, set Country, setup groups, access A20-Mini User Guide, and view A20-Remote version information.

Transmitter Quick List (Phone View Only)

From a phone, the Transmitter List and Transmitter View are not displayed simultaneously. The Quick List is a simplified version of the Transmitter List allowing for quick selection of transmitters from the Transmitter View. The list is horizontally scrollable and lists transmitters by name with their Status indicator. Touch the Back button to return to the Transmitter List.

Active Transmitter or Group

Touch any transmitter or Group in the Transmitter List to make it the active view. From a tablet, the highlighted transmitter or group in the Transmitter List indicates the active transmitter or group shown in the Transmitter View displayed on the right-hand side of the app. From a phone, the active transmitter or group is the one displayed in the Transmitter View and underlined in the Transmitter Quick List.

Transmitter View



Transmitter View

Displays the active transmitter's status window and provides access to the transmitter's menus and controls.

Transmitter Status Window

Displays the active transmitter's name, transmitter status, battery life, power source, frequency, RF power level, licensed frequency icon, and Bluetooth signal strength meter.

Record and Timecode Window

Displays the current timecode value, frame rate, absolute time of recording, and the remaining time and space of media. The window is red when the transmitter is actively recording. This window is not displayed when A20-Mini Mode is set to RF Only.

Transmitter Menu

This menu offers control of the active transmitter's Name, Frequency, Mute Mic, RF Power, Mode, and power options. The menu also provides access to format media and information about the transmitter.

Transmitter Controls

Allows control of the active transmitter's Power On, Power Off, Record, Stop, and Identify mode.

Group View

See Group Control for details.

Manage Transmitters

Manage Transmitters is the first page displayed when launching the A20-Remote app if no transmitters have been paired to the mobile device.

Manage Transmitters displays all transmitters within range that are in Pairing mode and any A20-Mini that has been previously paired to the mobile device. Transmitters appear in Manage Transmitters with transmitter name and current firmware version. Paired transmitters that are not within Bluetooth range or are connected to another device are displayed in italics and the Enable switch is grayed out.

Enter Manage Transmitters at any time by touching the Transmitter List gear icon.

Pairing an A20-Mini with A20-Remote

With A20-Mini off, press and hold the red button until the blue LED blinks continuously. USB must be disconnected from computers to enter Pairing mode. Make sure all instances of A20-Remote are fully closed on other mobile devices before attempting to pair to a new device.

From A20-Remote's Manage Transmitters window, touch the Pair box to add a check mark and pair the A20-Mini to the mobile device. The A20-Mini exits Pairing mode once it has been paired with the mobile device. Agree to the Terms and Conditions displayed in the app to continue.

To unpair/remove an A20-Mini from the mobile device, touch the Pair box to clear the check mark. Once removed, repeat the pairing process to re-add the transmitter.

Enabling A20-Mini transmitters for control

From the A20-Remote Manage Transmitter window, enable an A20-Mini for control using the Enable switch. Enabled transmitters are added to the Transmitter List and can be controlled from A20-Remote.

Power off from app requires confirmation

When Power off from app requires confirmation is active, touching the Power button in the Transmitter View displays a confirmation pop up to avoid accidentally powering off an A20-Mini. Deactivate this option when you want the Power button to power off A20-Mini transmitters without confirmation.

Country

Country is automatically set by Location Services of the mobile device. The Country setting determines available Frequencies and RF Power options. It is the users responsibility to operate on allowed frequencies in their region.

Group Setup


Enters the Group Setup menu. See Group Control for more information.

User Guide

Touch to visit Sound Devices website with quick links to the A20-Mini User Guide, FAQ, and tutorial videos.

A20-Remote Version

Displays the current A20-Remote software version.

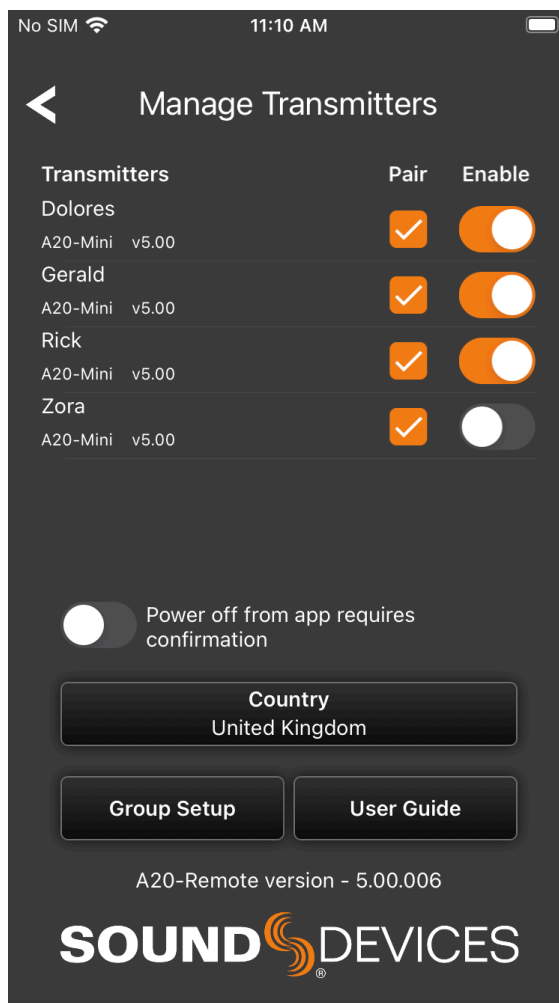


Transmitter List







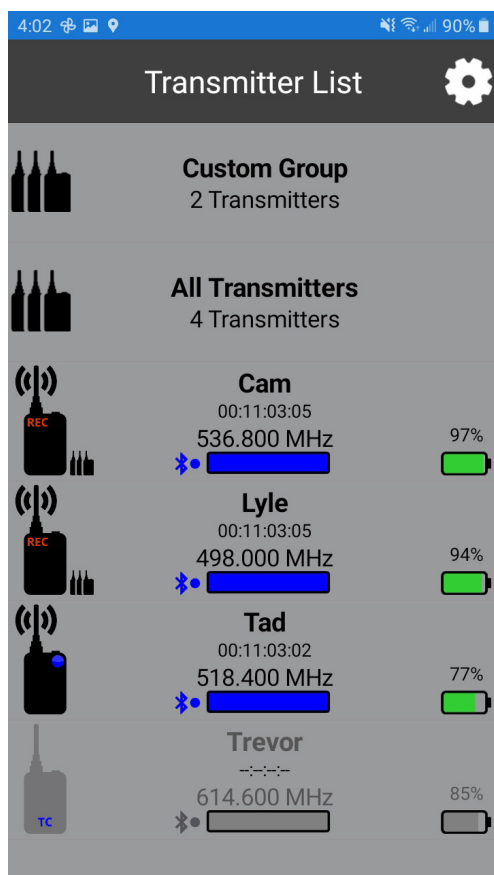



The Transmitter List is a scrollable list of Groups and all enabled transmitters.

Groups appear at the top of the Transmitter List. The All Transmitter and custom groups can be removed from the Transmitter List in Group Setup.

Each transmitter is listed with a high-level view of the transmitter's status. This includes the transmitter's name, set frequency, Bluetooth signal strength meter, the status of battery level/charging, custom Group assignment, and an A20-Mini Status indicator that displays the status of A20-Mini power, audio presence/mute, record, RF transmission, and Identify mode.



A20-Mini Status Indicator

| Icon | Description |
|---|---|
|  | A20-Mini On The A20-Mini appears black when it is on. |
|  | A20-Mini Recording The letters "REC" appear in red in the top left corner when the A20-Mini is recording. |
|  | A20-Mini Transmitting RF The A20-Mini appears with RF waves coming from the antenna when it is transmitting RF. |
|  | A20-Mini Audio Presence The A20-Mini appears with a green circle in the top right corner when audio is present. |
|  | A20-Mini Mic Muted The A20-Mini appears with a blue circle in the top right corner when the microphone is muted. |
|  | A20-Mini Recording, Transmitting, Audio The A20-Mini is on, recording, transmitting RF, and audio is present. |
|  | A20-Mini Identify Mode The A20-Mini appears with a flashing 'ID' when the unit is in Identify mode. |
|  | A20-Mini Off The A20-Mini appears gray when it is powered off. |
|  | A20-Mini Off, Holding Timecode The A20-Mini appears gray with "TC" in blue when it is powered off and holding timecode. |
|  | A20-Mini Unknown State The A20-Mini appears with '?' when the status is unknown. This could be displayed because the unit is out of range or the power source has been removed or depleted. |

Transmitter List (Cont.)

Custom Group Indicator






Custom Group Indicator
The Custom Group indicator displays when the A20-Mini is a member of the custom group. See Group Control for more information.

Bluetooth Signal Strength Indicator



Bluetooth Signal Strength Indicator
Displays the signal strength of the A20-Mini Bluetooth signal received by the mobile device. The Bluetooth meter border is red when the mobile device is not communicating with the A20-Mini. A blue dot appears after the Bluetooth icon when the A20-Mini is connected.

Battery/Power Status Indicator

| Icon | Description |
|--|--|
|  | <p>Battery Level Indicator Displays the level of the battery.</p> <ul style="list-style-type: none"> • Green = Good • Orange = Marginal, about an hour of battery life remaining. • Red = Low, 15-20 minutes of battery life remaining. • Flashing Red = Critically low, RF, audio, and recording disabled. <p>Remaining battery is displayed directly above the battery icon in percentage for Li-Ion and in voltage for AAA batteries.</p> <p>It is normal to see voltages increase for the first 60-90 minutes when fresh Energizer Lithium primary AAA cells are put under load. This is due to the characteristic of the cells gradually warming up, raising the terminal voltage.</p> |
|  | <p>Battery Charge Indicator Displays the charging status of the battery.</p> <p>Orange = Charging Green = Charging complete</p> |
|  | <p>USB Power Displays when USB is powering the A20-Mini and there are no batteries inserted.</p> |

Transmitter Name

Displays the name of the A20-Mini. The serial number is the default name of the A20-Mini. The A20-Mini name is changed in the Transmitter View menu.

Transmitter Timecode

Displays the timecode values in hours:minutes:seconds:frames of the connected transmitter. This allows you to quickly see that the connected A20-Mini transmitters are running the same timecode. It is normal to observe a few frames difference between transmitter timecode displays.


If the transmitter is either off or not connected, timecode values are displayed as --:--:--:--. Timecode values are not displayed in RF Only mode.

Transmitter Frequency

Displays the RF frequency on which the A20-Mini is transmitting. The RF frequency can be changed in the Transmitter View menu.

Reordering the Transmitter List

Reorder Transmitter List by pressing and holding an A20-Mini, then dragging it into the desired position. Groups cannot be reordered. Groups can be removed from Transmitter List in the Group Setup menu.

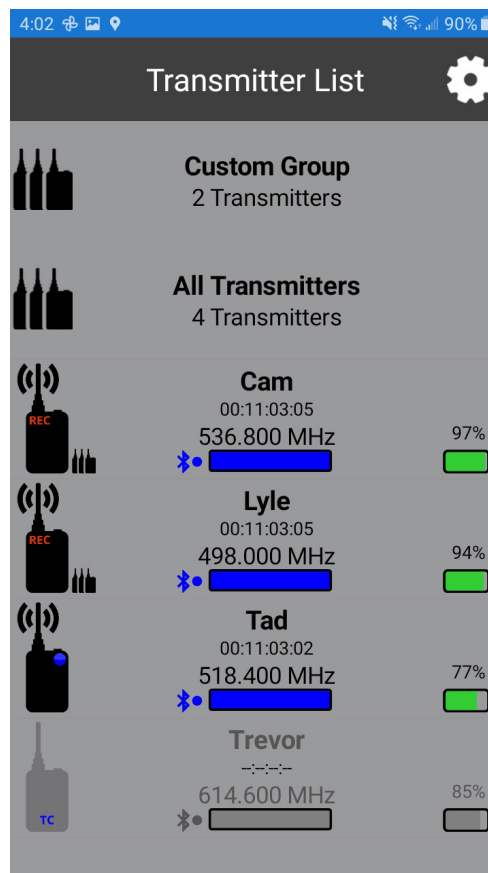

Transmitter View

The Transmitter View displays further details of the active A20-Mini and provides control of functions and menus of the selected transmitter.

Active A20-Mini in the Transmitter View

The active A20-Mini in the Transmitter View is indicated by the highlighted entry of the Transmitter List. Touch any transmitter in the Transmitter List to make it the active transmitter.

Quick List (Phone Only)

The Transmitter Quick List is available on phones only because the nature of the phone's smaller screen size does not allow the Transmitter List and the Transmitter View to be simultaneously displayed.

The Quick List is a horizontally scrollable list of all enabled transmitters displayed only with the A20-Mini Status indicator and transmitter names. Touch a transmitter in the Quick List to make it the active transmitter in the Transmitter View. Touch the back button to exit back to the Transmitter List.

Transmitter Status Window

The Transmitter Status window displays detailed information of the active transmitter. The A20-Mini Status indicator, Battery / Power status indicator, and Bluetooth Signal Strength meter are described in detail in the Transmitter List section. These indicators are also present in the Transmitter Status window. In addition, the Transmitter Status window shows the active power source and RF Transmission details.

Power Source Details

The active power source is displayed next to the Battery Level meter and battery percentage/voltage.

- AAA is displayed when powering from AAA batteries.
- Li-Ion is displayed when powering from a Li-Ion Sony NP-BX1 battery.
- USB is displayed when powering the A20-Mini from the USB-C connector.

RF Transmission Details

RF Transmission details are displayed when A20-Mini mode is set to RF Only or REC + RF (not available in the U.S.). The set frequency is displayed in MHz and the RF Power setting is listed below.





License Required

Some frequencies may require a license to operate on in your area. The License icon appears as a reminder to the user if the set frequency requires a license for the current Country.

Recording & Timecode Status Window

Recording & Timecode details are displayed when A20-Mini mode is set to REC Only or REC + RF (not available in the U.S.). Timecode values, frame rate, absolute record time counter, file format (32-bit float, 48 kHz), and remaining record time / space of the media. This window is red when the A20-Mini is recording.

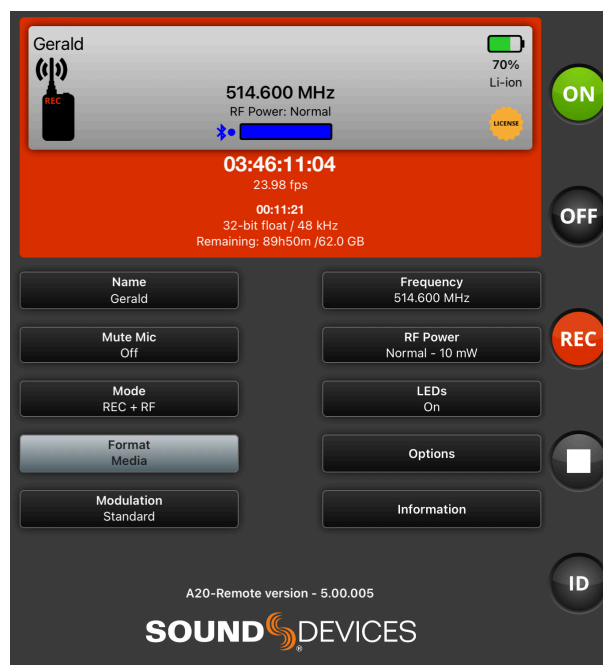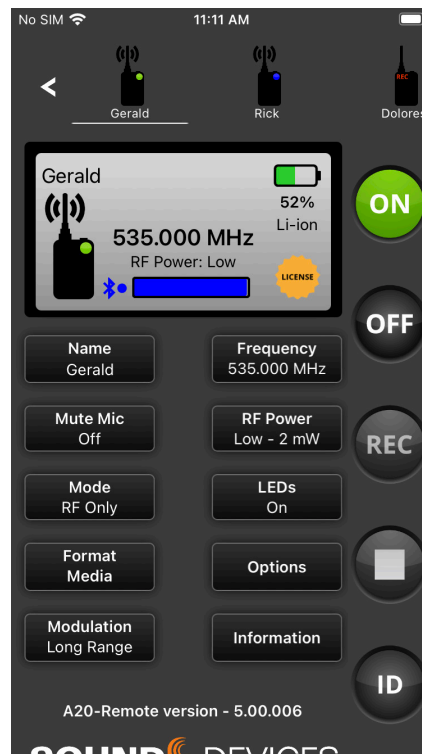

Transmitter View (Cont.)

Controlling A20-Mini from A20-Remote

From the Transmitter View you can control parameters of the A20-Mini while it is powered on. The A20-Mini continues to communicate with the app when powered off. While off, the A20-Mini settings and timecode are displayed. The A20-Mini can be powered on or put into Identify mode from the app while the A20-Mini is powered off.

Transmitter Controls

The far right-hand side of the Transmitter View provides easy access to Power, Identify mode, Record, and Stop.



Transmitter Power On

Touch the Power ON button to power the A20-Mini on. The button is black when the transmitter is off and green when on.



Transmitter Power Off

Touch the Power OFF button to power the A20-Mini off. The button is gray when the transmitter is off and black when on. By default a confirmation pop up message appears when powering off the A20-Mini from the app. This can be deactivated in Manage Transmitters by deactivating Power off from app requires confirmation.



Record

Touch the Record button to start a recording on the A20-Mini. The button is red while recording. The button is gray when recording is not permitted.



Stop

Touch the Stop button to stop recording. The button is yellow while recording is stopped. The button is gray when recording is not permitted.





Identify Mode

Touch the Identify button to put the A20-Mini into Identify mode. All LEDs (except the audio LED) on the A20-Mini flash blue making it easy to locate a specific A20-Mini. When Identify mode is active, the Identify button is green and the A20-Mini Status indicator shows "ID" in green text. Touch the Identify button again or press the A20-Mini red button to disable Identify mode. Identify mode is available when the A20-Mini is powered on or off.

Transmitter Menu

The Transmitter Menu is displayed beneath the Transmitter and Record & Timecode Status windows of the Transmitter View. It offers control of the A20-Mini Name, Frequency, Mute Mic, RF Power, Mode, LEDs, Format Media, Options, Modulation, and access to A20-Mini Information.

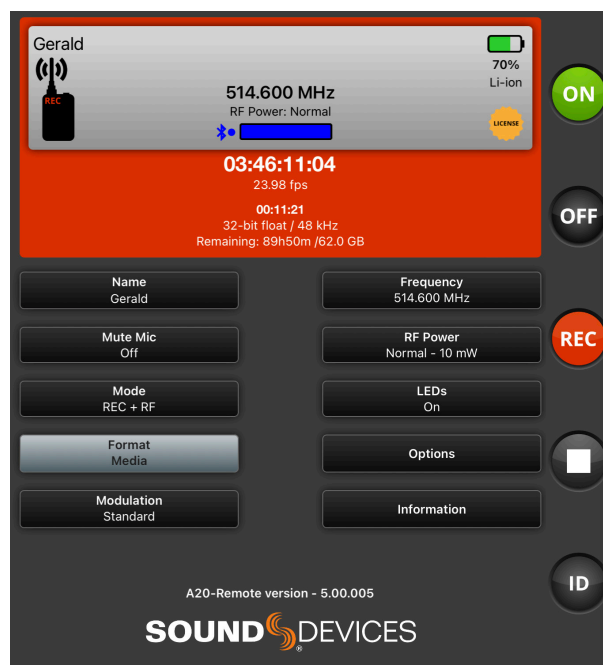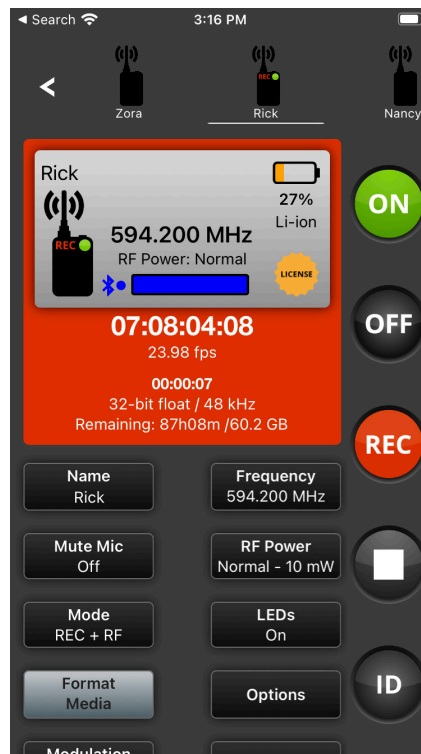

Transmitter View (Cont.)

Naming the A20-Mini

While in the Transmitter View, touch the Name button and use the pop up QWERTY keyboard to rename the transmitter. Up to twelve alpha-numeric characters can be used for the transmitter's name. The serial number of the unit is the name by default. Transmitter names are sent over RF to the A10-RX and are embedded in metadata as the Track Names of recorded WAV files.

Setting Frequency

The A20-Mini transmits on frequencies ranging from 470 MHz–694 MHz. The frequencies available are determined by your geographic location.

Touch the Frequency button to enter the Frequency menu. From the frequency menu, use the scroll wheels to select a frequency (integer and fractional of MHz) or use the +400 kHz and -400 kHz buttons. Touch the Set Frequency button to set the frequency and exit back to the Transmitter View.

After changing frequency, attach an antenna with a length specific to the frequency in use. Using the wrong length of antenna reduces RF range. The recommended antenna for the set frequency is displayed in the Information menu. See Antenna Guide for more information.

Setting RF Power

RF power is the strength of the transmitting signal. The A20-Mini offers the following RF power settings.

- Off - A20-Mini is not transmitting RF.
- Low - 2 mW
- Normal - 10 mW
- High - 20 mW
- *Extra High - 40 mW

This setting only appears when Options>Allow Extra High - 40 mW RF Power is active.

RF Power settings are based on the selected Country of the device running A20-Remote as some legal restrictions may apply. Touch the RF Power button and make a selection from the list.



In situations where the transmitter is relatively close to the receiver, the Low - 2 mW setting offers the best battery life.

For most common wireless microphone applications, the Normal - 10 mW setting provides excellent range.

In situations where body absorption may be an issue or extended range is required, the High - 20 mW setting can be helpful.

If significant body absorption is unavoidable or maximum range is required, the Extra High - 40 mW setting can be enabled via the settings menu. Please be aware that the Extra High - 40 mW RF Power setting can reduce battery life by over 20%.

Tip: Try using Long Range Modulation to increase RF range prior to increasing the RF Power setting.

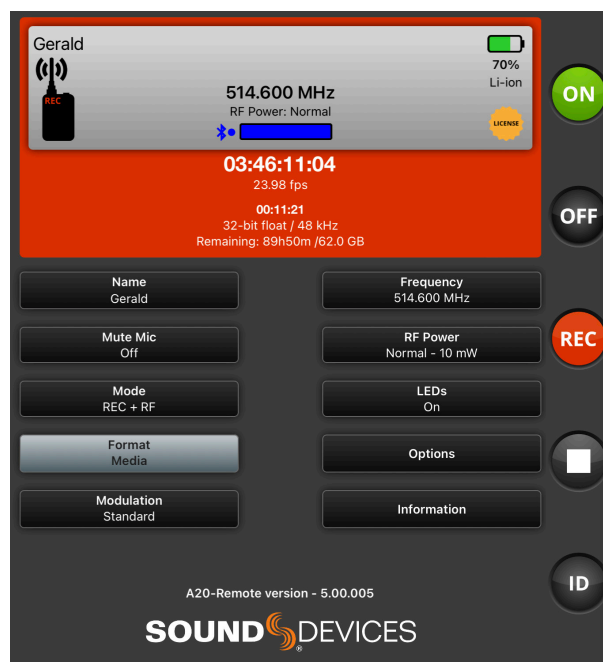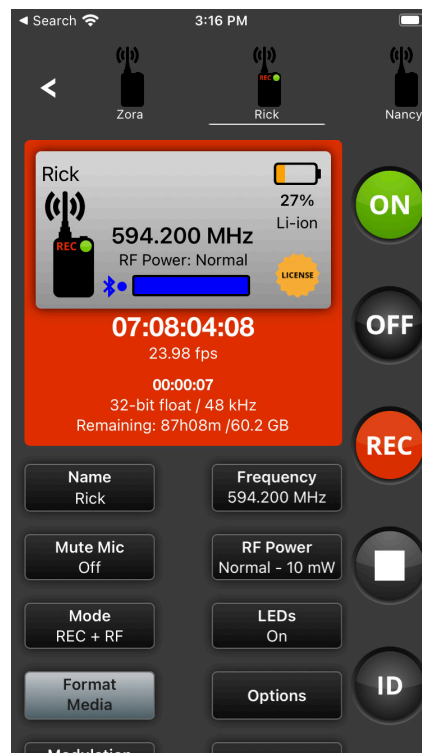

Mode

Touch the Mode button to enter the Mode menu. Select between RF Only, REC Only, and REC + RF.

Simultaneous Record and Transmit mode is not available on A20-Mini units sold or operated in the United States of America.

Record & Timecode details are not displayed in the TX Status Window when RF Only is selected. RF Transmission details are not displayed in the Transmitter Status window when REC Only is selected.

Mute Mic

Touch the Mute Mic button to mute the microphone. When muted, no audio is present in the recordings or transmitted. Mute status is indicated by a blue Mute Mic menu button, a blue dot in the A20-Mini Status indicator, and the A20-Mini Audio LED turns solid blue.

LEDs

The A20-Mini LEDs can be turned on or off. Turn the LEDs off when you need the A20-Mini to be discreet. When Off, the LEDs do not illuminate except when pressing the red button to power on, power off, or pair, in Identify mode, and when USB-C is connected.

Formatting Media

Formatting the A20-Mini media deletes all recorded files. It is good practice to periodically format media. Make certain to transfer any files before formatting. The first eleven characters of the transmitter name are used to name the media. Media is named at time of format.



Modulation

Select Standard or Long Range Modulation. When compared to Standard Modulation, Long Range Modulation has better sensitivity. This increased sensitivity results in more robust performance in challenging RF environments.

The Modulation setting must match between the A20-Mini and the A10-RX in order for the transmitted signal to be received.

Information

Displays the recommended antenna and TV Channel of the current set frequency, version of A20-Mini firmware, A20-Mini serial number, and compliance documentation for local government requirements if applicable.

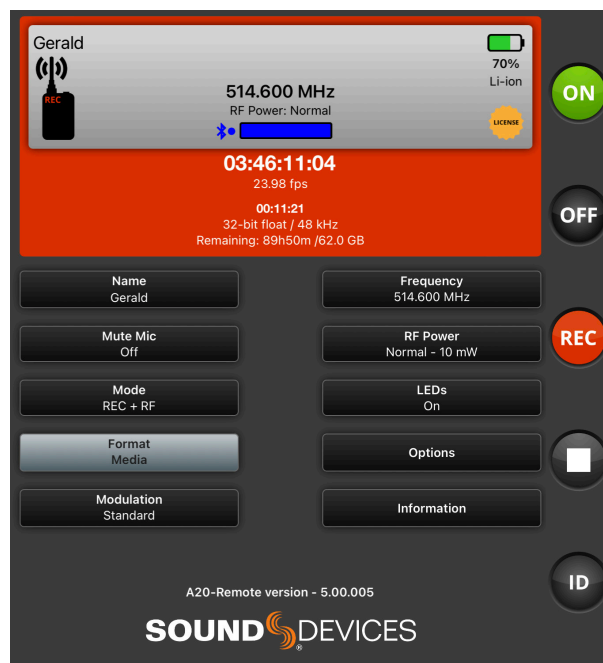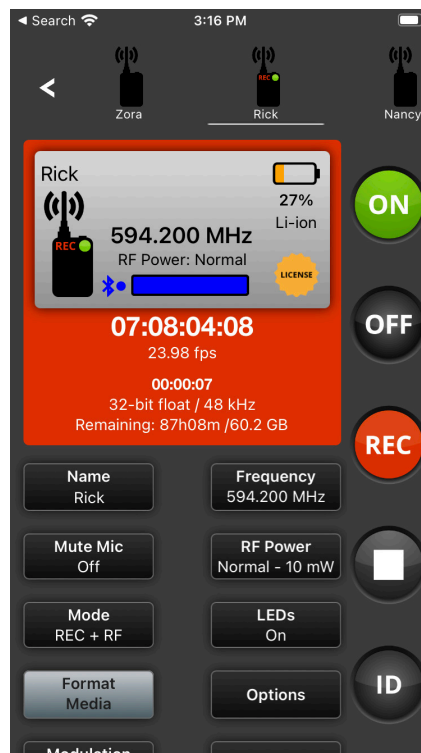

Transmitter View (Cont.)

Options

The Options menu provides access to a sub-menu of less frequently changed settings.

- Power on when removed from PowerStation-8M
- Power on with Lav mic connection
- Resume record state upon power on
- Allow Extra High - 40 mW RF Power
- Restore Defaults

Auto Power On When Removed from the PowerStation-8M

The A20-Mini automatically powers off when connected to a charging bay of the PowerStation-8M. To save time from having to manually power on the A20-Mini, activate the Power On When Removed from the PowerStation-8M feature. When active, removing the A20-Mini from the PowerStation-8M powers the transmitter on. This feature can be turned on or off. See PowerStation-8M for more details.

Auto Power with Lav Mic Connection

The A20-Mini can auto-detect the presence of a lavalier microphone connection and power on and off accordingly. When Auto Power with Lav Mic Connection is active, connecting a lavalier microphone to the A20-Mini automatically powers on the transmitter. Removing the lavalier mic connection automatically powers the A20-Mini off. This feature can be turned on or off.

Resume Record State Upon Powering On

The A20-Mini by default powers on in Stop mode. When Resume Record State Upon Powering On is active, the A20-Mini resumes the state of the recorder when it was powered off. This menu item is not available when in RF Only mode.


Allow Extra High - 40 mW RF Power

Activate this option when you want the Extra High - 40 mW setting available in the RF Power menu. See RF Power for more information.

Restore Defaults

Touch the Restore Defaults button to restore default settings.

- Name = Serial Number
- Frequency = Lowest frequency allowed in current Country
- Mode = REC + RF (International), RF Only (United States)
- LEDs = On
- RF Power = Normal - 10 mW
- Mute Mic = Off
- Modulation = Standard
- Power on when removed from PowerStation-8M = Off
- Auto power with lav mic connection = On
- Resume record state upon powering on = Off
- Allow Extra High - 40 mW RF Power = Off
- Recording = Stopped
- Timecode = 00:00:00:00
- Frame Rate = 30 fps
- Identify mode = Off
- Power = On

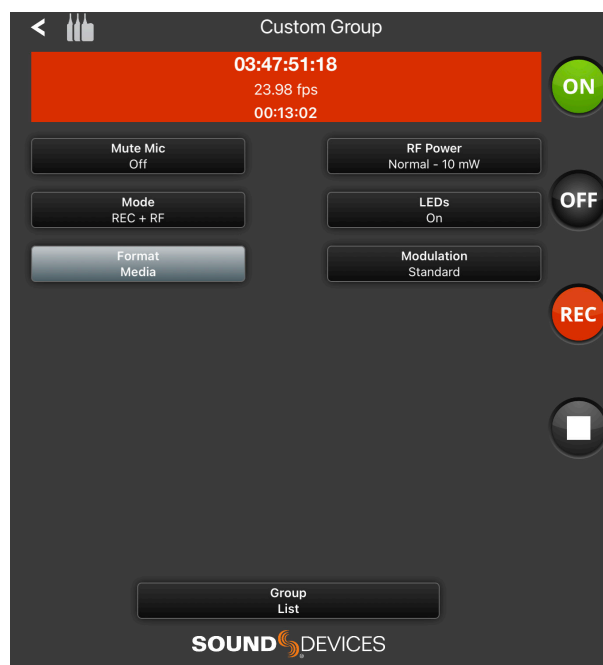

Group Control

Multiple A20-Mini transmitters can be controlled as a group from the A20-Remote app. Group Control drastically simplifies the workflow and saves time when changing powering and record status of multiple A20-Mini transmitters.

Two groups are available, All Transmitters group for controlling all enabled transmitters and a custom group for controlling select group of transmitters.

Groups appear at the top of the Transmitter List. When selected, the Group View is displayed. The Group view displays the status of all transmitters in the group and provides group control of the following functions.

- Power On
- Power Off
- Record
- Stop

Group Setup

Navigate to Manage Transmitters>Group Setup to change group options and create a custom group.

Show “All Transmitters” Group in the Transmitter List

When active, the All Transmitters group is displayed and accessible from the Transmitter List. Deactivate to remove the All Transmitters group from the Transmitter List.

Show Custom Group in the Transmitter List

When active, the custom group is displayed and accessible from the Transmitter List. Deactivate to remove the custom group from the Transmitter List.

Custom Group Name

Touch the text box and use the pop up QWERTY keyboard to rename the custom group. Up to twelve alpha-numeric characters can be used for the custom group name. Custom Group is the name by default.



Assigning A20-Mini Transmitters to the Custom Group

All A20-Mini transmitters paired to the A20-Remote application are displayed in the Group Setup list. Touch the Group check box to assign or unassign an A20-Mini to the custom group.

Use the Select All check box to assign or unassign all paired transmitters to the custom group. A20-Mini transmitters assigned to the custom group appear with a Custom Group Indicator in the Transmitter List and Transmitter view.

Selecting a Group from the Transmitter List

Groups appear at the top of the Transmitter List. Groups are shown with the number of available transmitters in the group. Touch a group to enter the Group View.

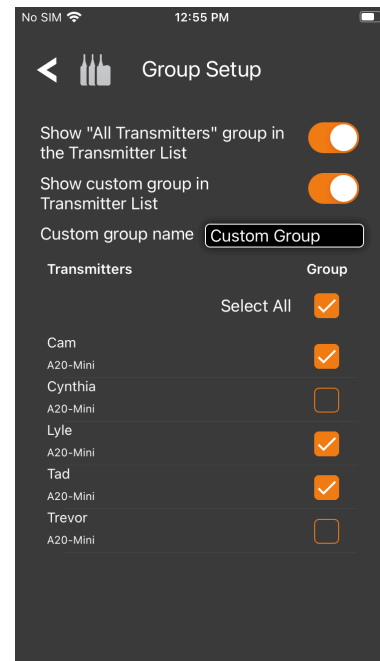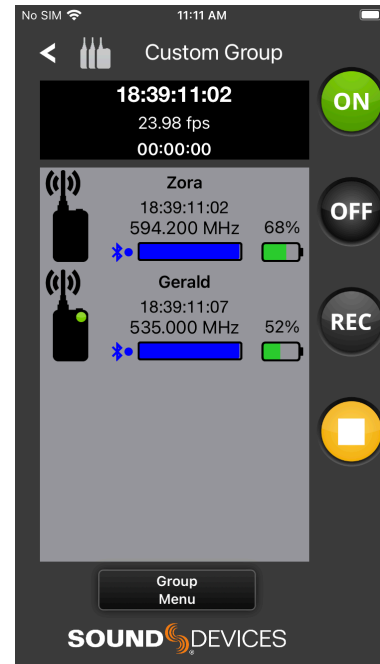


Group View

The Group View displays a scrollable list of all available A20-Mini transmitters in the group. Transmitters are displayed with the same information shown in the Transmitter List. Touching a transmitter accesses the A20-Mini's Transmitter View.

The Recording and Timecode window displays timecode, frame rate, and an absolute record time counter. The window is red when recording and black when stopped. This window is not displayed in RF Only mode. The first transmitter of the group list is used to display the details of the Recording and Timecode window.

Controlling a Group of A20-Mini Transmitters

Touch any button in the Group View to apply the function to all available transmitters in the group.

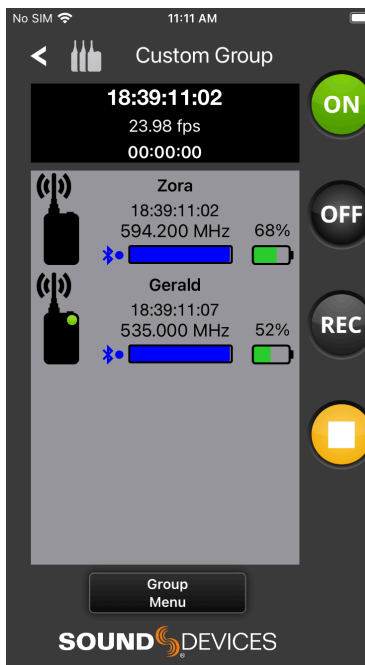

Group Power On

Touch the Group Power ON button to power on the group of transmitters. The button is black when the transmitters are off and green when on.



Group Power Off

Touch the Group Power OFF button to power off the group of transmitters. The button is gray when the group is off and black when on. By default a confirmation pop up message appears when powering off A20-Mini transmitters from the app. This can be deactivated in Manage Transmitters by deactivating Power off from app requires confirmation.



Group Record

Touch the Group Record button to start recording on the group of A20-Mini transmitters. The button is red while the group is recording and black when stopped. The button is gray when recording is not permitted.




Group Stop

Touch the Group Stop button to stop recording on the group of A20-Mini transmitters. The button is yellow while stopped and black when recording. The button is gray when recording is not permitted.



Partial

Partial is displayed in between the ON and OFF buttons and in between the Record and Stop buttons when there is a discrepancy between transmitters in the group. For example, if the group is powered on and an individual A20-Mini is then powered off, "Partial" flashes between the ON and OFF buttons.

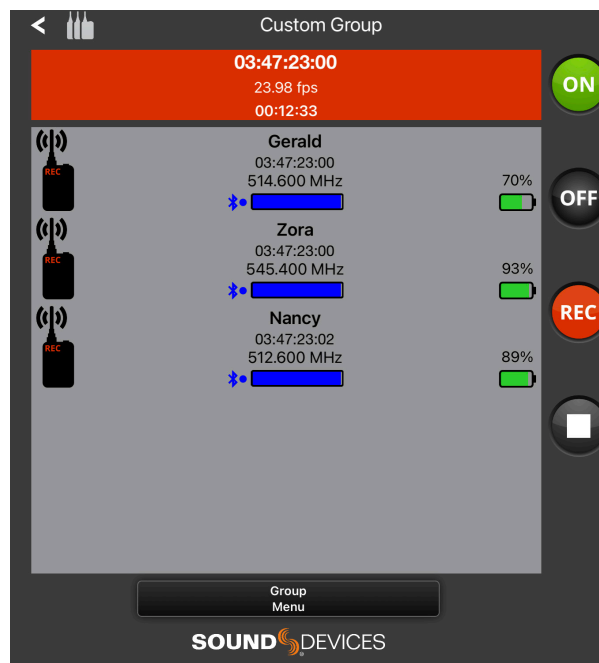

Group Status Screen

A Group Status screen appears while A20-Remote is sending commands to transmitters in the group. The status of the command sent is displayed for each A20-Mini in the group. The status text is green while sending the command, white when successful, and red if the A20-Mini was unable to accept the command.

Touch the Cancel button to abort the group command. Canceling a command does not revert any changes already applied and may result with the group in a “Partial” state.

Group Menu

The Group Menu allows you to set Mute, RF Power, Mode, LEDs, Modulation, and Format Media for all transmitters in the group. Partial is displayed in the menu button when transmitters in the group have different settings.

Touch the Group List button to return to the Group View.




Connecting Lavalier Microphones to A20-Mini

Connect a 2- or 3-wire lavalier microphone to the A20-Mini transmitter’s 3-Pin LEMO connector. Lock the connection by turning clockwise until the connector is firmly attached to the A20-Mini.

The AC-BALXLR-4 3-pin LEMO to XLR female cable is not compatible with the A20-Mini as it does not have a balanced-input mode/microphone preamplifier.

| Source Type | A10-TX | A20-Mini |
|----------------------|--------|----------|
| 2-wire lav | Yes | Yes |
| 3-wire lav | -- | Yes |
| Balanced mic XLR | Yes | -- |
| Balanced line XLR | Yes | -- |
| Auto-power-on w/ lav | -- | Yes |

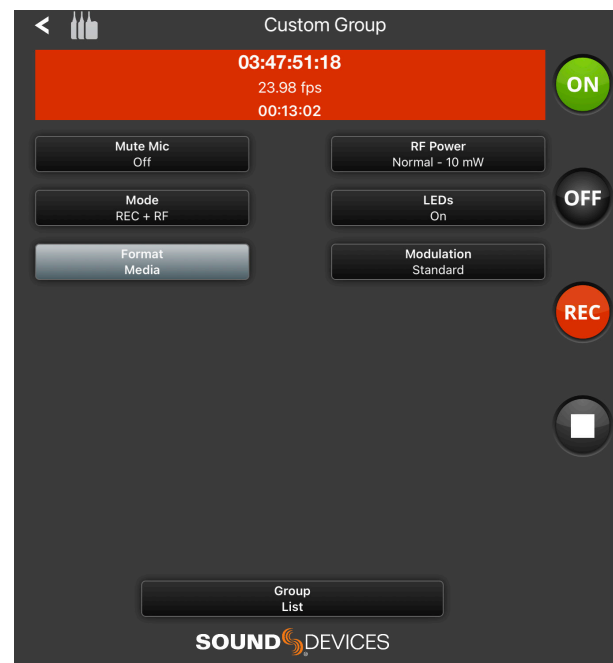

Tuning A20-Mini and the Audio Ltd A10-RX

RF signals transmitted by the A20-Mini transmitter are received by the Audio Ltd A10-RX. Set the same modulation and frequency on the transmitter and receiver. See the A10-RX User Guide for more details.

GainForward

The A20-Mini transmitter introduces GainForward, a new feature that eliminates the need to adjust microphone preamplifier gain at the wireless transmitter. Audio levels from the transmitter are controlled either directly at the mixer's trim control or at the wireless receiver. If the talent speaks too softly or emotes too loudly after being "wired" with the transmitter, simply adjust the transmitter gain with the mixer's gain trim. Read more about GainForward at:

<https://www.sounddevices.com/gainforward-explained/>

Adjusting Audio of the A20-Mini Signal from the A10-RX

From the A10-RX home screen, press the channel's arrow button twice to enter the Input menu. From the Input menu, press the middle button to select a sub-menu to adjust gain, low cut, or limiter of the incoming A20-Mini transmitted signal.

Gain is adjustable from 0 to 60 dB. Low cut can be set to Off, 40 Hz, 60 Hz, 80 Hz, 100 Hz, or 200 Hz. Limiter can be turned on or off. The information menu displays the status of the tuned A20-Mini. See the A10-RX User Guide for more details.

Adjusting Audio of the A20-Mini Signal from the 8-Series or 688

When the A10-RX receiving A20-Mini signal is slotted into the SL-2 or SL-6, the A10-RX Input menu settings are bypassed and all gain, low cut, and limiter activity are performed and controlled by the 688, 833, 888, or Scorpio. See the Mixer-Recorder User Guides for more information.

Recording WAV Files

The A20-Mini records 32-bit float Broadcast WAV (under 4 GB) or RF64 WAV (over 4 GB) files at 48 kHz sampling rates. 32-bit float files are recorded such that gain decisions can be made after recording. Because of the high dynamic range of the A20-Mini audio levels are never too high or too low. Learn more about 32-bit float at:

<https://www.sounddevices.com/a20-mini-32-bit-float-recording>

A20-Mini recordings are started and stopped using the record and stop buttons in the A20-Remote Transmitter View.

The file name format is

transmitter name-YYMMDDHHMMSS.WAV.

For example, if the A20-Mini name has been changed to "Barney" and a recording is created on July 10, 2021 at 09:30 (24 hour format), the resulting file is named Barney-210710093000.WAV. All files are recorded at root of the media (no folders).

Jamming Timecode on A20-Mini

The A20-Mini accepts timecode from external LTC sources. The timecode value and frame rate are taken from incoming LTC source. If timecode has not been jammed, the A20-Mini starts rolling timecode from 00:00:00:00 when it is powered on.

Jammed timecode values are held for up to four hours after powering off, and up to one hour after the battery has been removed. This allows for time to swap batteries without having to re-jam timecode.

To jam timecode, connect a valid LTC source using one of the optional accessories, Sound Devices XL-TC-USBC-LEMO or XL-TC-USBC-BNC, to the A20-Mini USB-C port. Timecode is automatically jammed once a valid LTC source is connected. After a successful timecode jam, the Audio/LTC LED flashes blue on the 00 frame crossing.

Timecode is output from the USB-C using the Sound Devices XL-TCU-LEMO, so that you can verify the A20-Mini timecode is in sync with the LTC source. The Audio/LTC LED stops flashing blue when USB-C is disconnected.

For more information about the A20-Mini timecode accessory cables visit:

- <https://www.sounddevices.com/product/xl-tc-usbc-bnc/>
- <https://www.sounddevices.com/product/xl-tc-usbc-lemo/>

A20-Mini can also jam timecode from 8-Series Mixer-Recorders using a standard USB-C to USB-A cable. Connect the A20-Mini to the 8-Series USB-A port. Enter the 8-Series Menu>Timecode/Sync>Jam A20-Mini then select Jam A20. The 8-Series Jam A20-Mini menu displays the current timecode frame rate and values for the 8-Series and A20-Mini and displays the difference between the two units.

When the A20-Mini is powered off, the Audio/LTC LED and the Charge & Timecode LED flash blue on the 00 frame crossing to indicate timecode is being held.

The A20-Mini can also receive and jam timecode while connected to the optional PowerStation-8M via USB-C. See PowerStation-8M for more details.

| | A10-TX | A20-Mini | Cables |
|---|---------------|-----------------|-----------------------------------|
| LTC via Lemo-3 | Yes | -- | AC-TCBNC-IN |
| AC-TCBNC-OUT AC-TCLEMO™ LTC via USB-C | -- | Yes | XL-TC-USBC-LEMO XL-TC-USBC-BNC |
| Timecode jam via USB-A on 8-Series | -- | Yes | Standard USB-C to USB-A |
| Mass Timecode jam via PowerStation-8M | -- | Yes | BNC |

File Transfer to a Computer

The A20-Mini connects via USB-C to a computer as an exFAT-formatted mass storage device. Copy WAV files from the A20-Mini to the computer. When file transfer is complete, eject the drive from the operating system and disconnect USB.

Recording must be stopped on the A20-Mini before connecting to the computer. While connected to a computer RF transmission, audio, and recording are disabled.

Up to eight A20-Mini transmitters can be connected to a computer for file transfer using the optional PowerStation-8M. See PowerStation-8M for more details.

Updating A20-Mini Firmware

Register your A20-Mini to stay informed of firmware updates.

<https://www.sounddevices.com/product-reg-email/>

To update your A20-Mini firmware:

1. Connect the A20-Mini to the computer for file transfer using a USB-C cable or the PowerStation-8M. See File Transfer and PowerStation-8M for more information.
2. Download the A20-Mini firmware PRG file from: <https://www.sounddevices.com/download/?prod=a20-mini>
3. Copy the PRG file to the root of the A20-Mini media.
4. Eject the A20-Mini from the computer.

At this point, the LEDs “dance” to indicate the firmware update is in progress. The firmware update can take a few minutes to complete. Wait for all LED activity to stop before using or powering off the A20-Mini.

When the firmware update completes, the A20-Mini automatically deletes the PRG file from the media. Firmware version information is displayed in A20-Remote Manage Transmitter view and in the Transmitter View Information menu.

SD-Utility



Sound Devices SD-Utility is a companion application for MacOS and Windows. This application can be used to process files recorded by the A20-Mini to be more suited to the given workflow. A20-Mini 32-bit float, 48 kHz, monophonic WAV and RF64 WAV files can be renamed, snipped by timecode values, converted to 24 bit, conformed to a CSV Sound Report, exported as monophonic or polyphonic WAV, and more.

SD-Utility is also a companion application for the Audio Ltd A10-TX and A10-RX. For details specific to those products, please refer to their respective user guides.

Installing SD-Utility

Download the SD-Utility Installer for MacOS or Windows from:
<https://www.sounddevices.com/download/?prod=sd-utility>

Open the installer and install the application by following the on-screen instructions.

Minimum operating requirements:

- MacOS 10.11+, 64-bit
- Windows 10+, 64-bit


Importing A20-Mini WAV Files into SD-Utility

SD-Utility accepts monophonic WAV and RF64 WAV files recorded by the A20-Mini or MIC files recorded by the Audio Ltd A10-TX. There are three methods for importing files into SD-Utility.

1. Drag-and-drop WAV files or volumes/folders containing WAV files into the Source window.
2. Navigate File > Add and select WAV file(s) for import.
3. On the bottom left of the Source window, click + in Mac or Add in Windows, then select file(s) for import.

The Source window displays the following information for all imported files.

- Filename
- Transmitter name
- Date and time of file creation
- Start timecode
- End timecode
- Length of recording
- Frame Rate

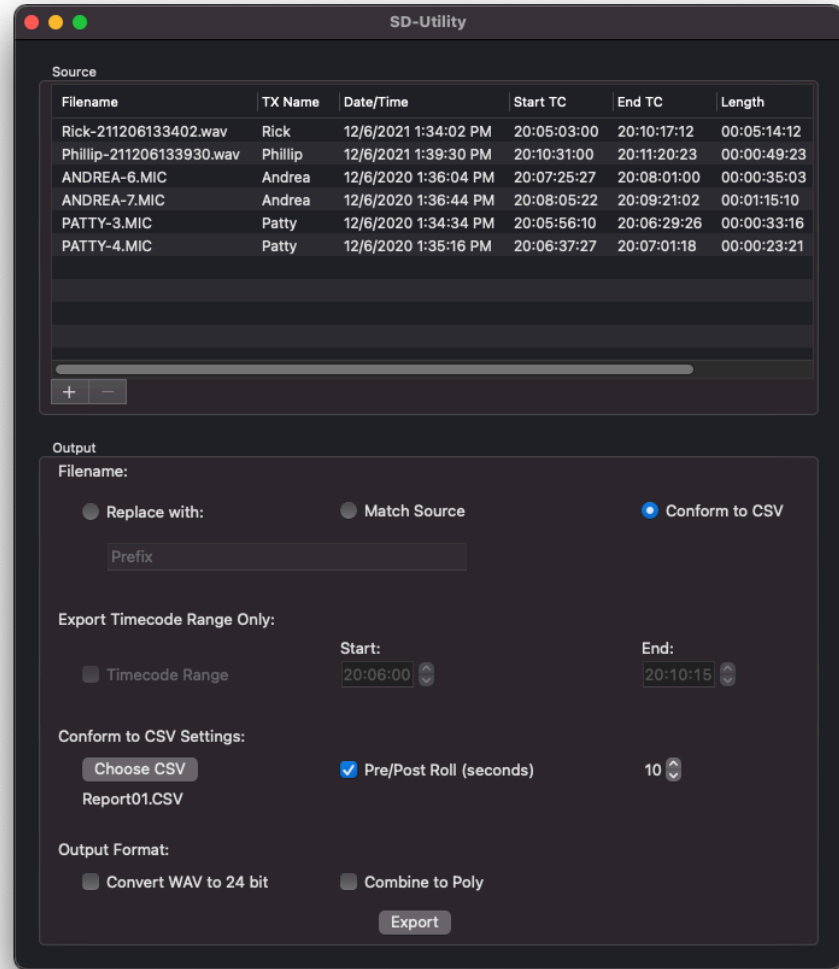

SD-Utility (Cont.)

Removing WAV files from the Source Window

There are three methods for removing WAV files from the Source window.

1. Highlight the WAV file(s) to be removed from the Source window, then click - on Mac or Remove on Windows.
2. Highlight the WAV file(s) to be removed from the Source window, then navigate File > Remove.
3. Highlight the WAV file(s) to be removed from the Source window, then press the Delete key.

Organizing Source Files

Click on a Information Header cell to order the list of files in the Source Window by information. For example, click the Start TC cell to arrange the files by timecode start times from lowest to highest. Click again to reverse the order from highest to lowest.

To manually order the list of source files, click and hold a file row and drag it into the desired position.

Selecting Files to Export

Highlight the file(s) to process and export from the Source window. Multiple files can be selected using keyboard modifiers, Apple and Shift in MacOS, Ctrl and Shift in Windows. If no files are selected, processing is applied to all files in the Source window.

Naming of Processed WAV Files


Processed WAV files will be named according to the Filename selection.

- **Match Source** uses the source file's name in the processed WAV file.
- **Replace with** allows the processed file to be named based on the custom entry.
- **Conform to CSV** uses the take information from a CSV Sound Report to determine the processed file names. See [Conforming A20-Mini WAV Files to CSV sound reports.](#)

Creating Shorter WAV Files Based on Timecode Range

When a shorter WAV file is needed than the original recording, you can use the Timecode Range feature to create a shorter WAV file. The length and content of the exported file is based on the entered timecode start and stop times.

1. Highlight the source file(s) from the Source window.
2. Select the Timecode Range check box.
3. Enter valid timecode start and end times. The values must fall within the range of the source file.
4. Select Export.

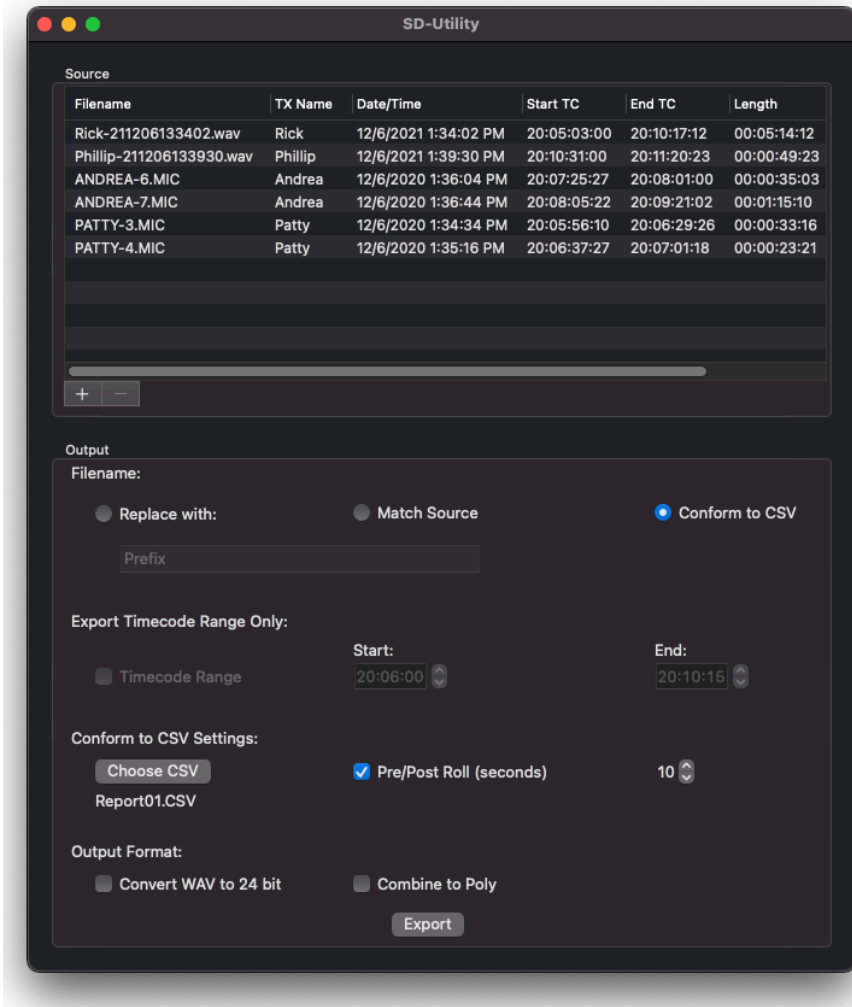

SD-Utility (Cont.)

Conforming A20-Mini WAV Files to CSV Sound Reports
 CSV sound report files generated by Sound Devices recorders can be used to extract only relevant audio from the A20-Mini WAV or A10-TX MIC files. Audio is extracted and a new WAV file is created based on the timecode in/out values of takes listed within the CSV.

The exported WAV file names and embedded metadata are changed to match the filenames and metadata of the corresponding takes in the CSV sound report.

Adding Pre- and Post-Roll to conformed files can benefit post production with access to audio just prior to and following head and tail slates. To add pre- and post-roll to conformed WAV files, select the Pre/Post Roll check box and enter a value from 0 to 10 seconds in 1 second steps.

If the source file does not contain audio data for the duration of the pre- or post-roll location, the exported file will begin and end at the closest point to the pre- and post-roll location where audio data is present.

Selecting Bit Depth of Exported WAV Files

The A20-Mini records 32-bit float WAV files. To convert the WAV files to 24-bit integer, select the Convert WAV to 24 bit check box.

Files that contain audio that exceeds 0 dBFS will be normalized to -0.1 dBFS to avoid clipping when exported as 24-bit.

Combining to Poly


Combine to Poly allows for the export of a single polyphonic WAV file containing audio tracks from each relevant transmitter for takes of the CSV Sound Report or a select timecode range.

Select the Combine to Poly check box to export a polyphonic WAV file, leave unchecked to export monophonic WAV files for each transmitter.

Combine to Poly is available with the following setups:


- Conform to CSV is selected
- Replace with: and Timecode Range are selected

The interleave order of the polyphonic WAV tracks are determined by the order of the files in the Source Window. Silence is written to a track of the exported polyphonic WAV file whenever audio data is not available from the source files.

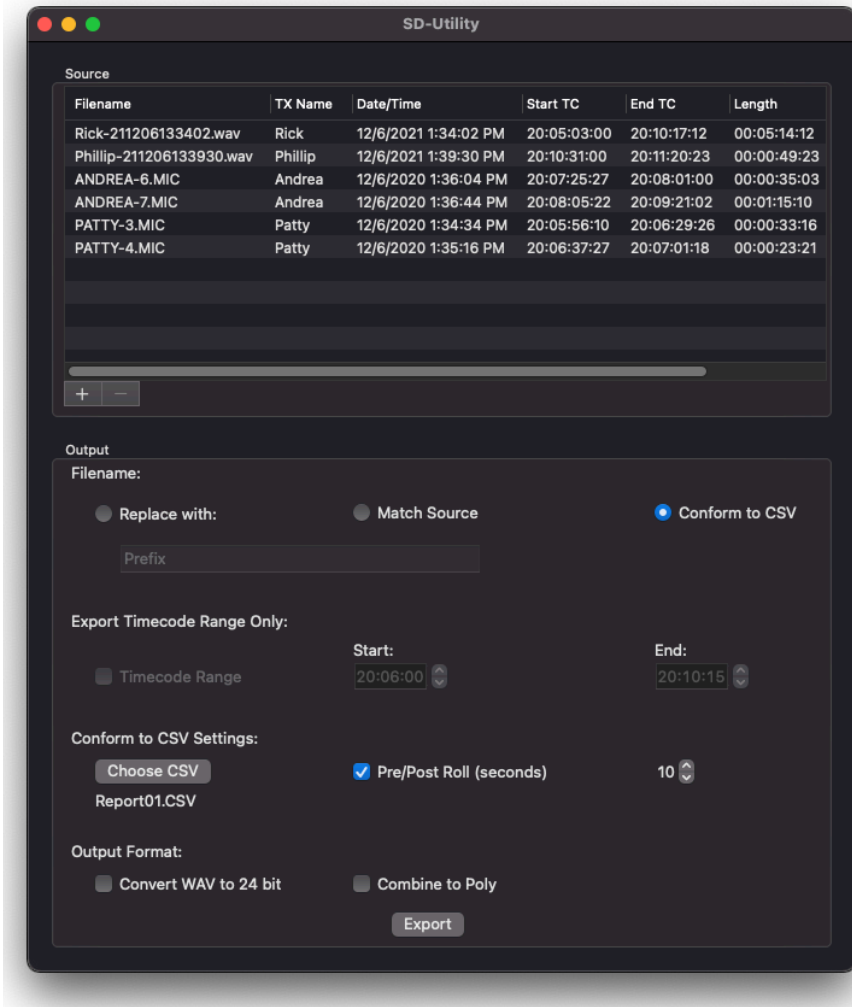

PowerStation-8M

The PowerStation-8M Eight Slot Charger for A20-Mini is an optional accessory. It offers battery charging, A20-Mini timecode jamming, and USB file transfer to and from a computer for up to eight A20-Mini transmitters.

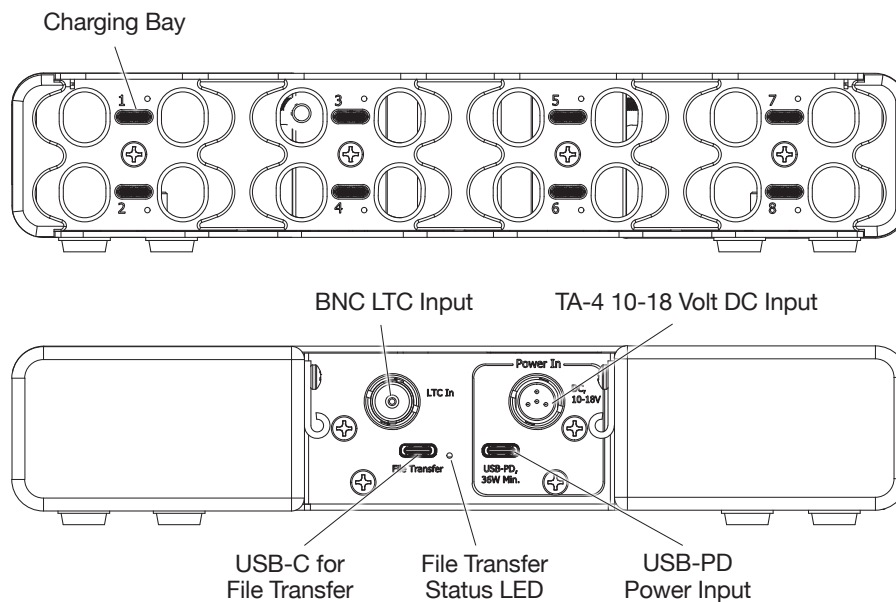

Charging Batteries from the PowerStation-8M

Enabled charging bays are indicated by LEDs within each charging bay. If a TA-4 or USB-PD with proper rating is used, all eight charging bay LEDs illuminate. If a USB adapter is used which does not supply sufficient power, then only three of the charging bay LEDs will illuminate.

The PowerStation-8M only charges Sony NP-BX1 batteries within an A20-Mini. AAA battery charging is not supported. Inserting A20-Minis with AAA batteries into the charging bay will not damage anything, but the unit will not charge.

Insert the A20-Mini into an enabled charging bay of the PowerStation-8M. The A20-Mini slides into a charging bay with the antenna-side first, the antenna may be left attached. Sound Devices recommends disconnecting lavalier microphones before inserting the A20-Mini into the charging bay.

Charging status is indicated by the A20-Remote application and the A20-Mini bottom panel Charge LED.

- Solid Orange = Charging
- Solid Green = Charging complete
- Off = Not charging

A20-Mini transmitters are powered off when inserted into a charging bay. The A20-Mini powers on when removed from the charging bay if 'Power On When Removed from PowerStation-8M' is active.

Bottom Panel 1/4"-20 Mounting Point (not pictured)

The PowerStation-8M offers a 1/4"-20 mounting point on the bottom panel for securely attaching to a rack shelf, such as the Pyle 1U Server Rack Shelf Mount Tray PLRSTN14U.

<https://pyleusa.com/products/plrstn14u>

PowerStation-8M (Cont.)

Powering the PowerStation-8M

The PowerStation-8M is powered via 12 VDC TA-4 connector or USB-PD power supply. The supplied 36 W USB-PD power supply supports full operation. Make certain third-party USB-C power supplies offer 36 W or higher in order to charge all eight A20-Mini transmitters at a time. Make certain any external supply connected to the TA-4 connector supplies at least 36 W.

Distributing Timecode to A20-Mini Transmitters

The PowerStation-8M is equipped with a Timecode input on BNC. Connecting a valid LTC timecode source to the PowerStation-8M jams the frame rate and timecode value to all inserted A20-Mini transmitters. The A20-Mini bottom panel Timecode LED flashes blue on the 00 frame following a successful jam.

Transferring A20-Mini Files via PowerStation-8M

The File Transfer USB-C connector is used to connect A20-Mini transmitters slotted into the PowerStation-8M to a computer as mass storage devices. Each connected A20-Mini transmitter will appear as its own mass storage device when the PowerStation-8M is connected to a computer. The PowerStation-8M USB-C connector is SuperSpeed USB (5 Gb/s) offering maximum transfer speeds when all eight slots are filled.

The File Transfer LED lights red when USB-C File Transfer is plugged in without a power adapter connected. The File Transfer LED lights green when USB-C File Transfer and either TA-4 or USB-PD are plugged in.

See File Transfer to a Computer for more information.

Updating A20-Mini Firmware via PowerStation-8M

Using File Transfer in combination with the PowerStation-8M, Firmware can be updated on up to eight A20-Mini transmitters.

PowerStation-8M A20-Mini Extraction Tool


The PowerStation-8M ships with an A20-Mini Extraction tool for easy removal of A20-Mini transmitters from PowerStation-8M charging bays. When multiple A20-Mini transmitters are in the charging bays, the Extraction tool provides more finger room.

The Extraction tool comes with an 18-inch steel lanyard for securing it to a rack. The lanyard can be removed by sliding the loop end of the lanyard over the center pillar of the extraction tool.

For safe keeping, insert the A20-Mini Extraction tool handle side first while pinching into an empty charging bay.

Removing A20-Mini from PowerStation-8M with the A20-Mini Extraction Tool

Align the Sound Devices logos of the Extraction tool and the A20-Mini battery door, then slide Extraction tool onto the A20-Mini until you hear a click. Pull the A20-Mini out of the slot. Pinch the handle to release the A20-Mini from the Extraction tool.

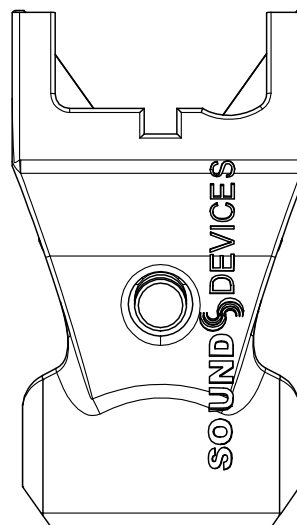

PowerStation-8M

Specifications

Specifications are subject to change without prior notice.
For the latest information available on all Sound Devices products, visit our website: www.sounddevices.com.

Power

- USB-C: PD (Power Delivery), 36 W or higher, or
- TA-4: 10 - 18 VDC, 36 W or higher
- Pin-4 hot, pin-1 ground, pin-2 and pin-3 data for smart batteries. Leave pins-2 and pin-3 disconnected if not using smart batteries.

LTC Input

- Input impedance: 5k ohm
- Signal level: 0.3 - 5 Vp-p

USB-C

- USB 3.0 SuperSpeed, internal hub

Dimensions (HxWxD)

- 40 mm x 220 mm x 136 mm (without feet)
- 1.58 in x 8.66 in x 5.35 in (without feet)

Weight

- 670 g
- 1.5 lb

Included Accessories

- Power Supply
- 2x USB-C to USB-C Cables, USB 3.0

A20-Mini Specifications

Specifications are subject to change without prior notice. For the latest information available on all Sound Devices products, visit our website: www.sounddevices.com.

Frequency Range

- 470 to 694 MHz
- Transmitters are tunable in 25 kHz steps
- Available frequencies are dependent on region

RF Output Power

- Off, Low - 2 mW, Normal - 10 mW, High - 20 mW, Max -40 mW, selectable

Modulation Mode

- Proprietary digital RF modulation Standard or Long Range, selectable

Antennas


- UHF RF: SMA connector, removable
- 2.4 GHz built-in

Audio Frequency Response

- 10 Hz - 20 kHz, +/- 1 dB re 1 kHz

Audio Input Type

- Lavalier Microphone via 3-pin LEMO
- Pin-1 ground
- Pin-2 5 V bias
- Pin-3 audio/bias (8k ohm to 5 V)

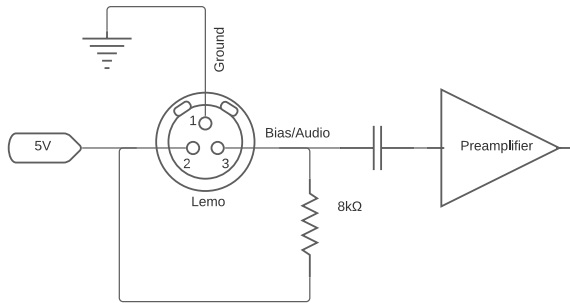

Bias Power

- 5 V

Input Impedance

- 8k ohms

Input Clipping Level

- +5 dBu

Dynamic range

- 130 dB min (A-weighted)

Menu and Controls

- Power & Pair button protected inside battery compartment
- A20-Remote, mobile device application of iOS, iPad, and Android

Remote Control

- A20-Remote Android, iOS, and iPad app via Bluetooth 5.2 LE

Recording Media

- Internal 64 GB
- 10% over-provisioned for optimum performance

Recording File Format

- 32 Bit Float, 48 kHz, Monophonic
- Broadcast WAV (<4 GB), RF64 WAV (>4 GB)

Simultaneous Record and Transmit mode is not available on A20-Mini units sold or operated in the United States of America.

Timecode (LTC)

- Input via XL-TC-USBC-LEMO or XL-TC-USBC-BNC: 0.3 V - 3 V p-p (-17 dBu to +3 dBu), 20k ohm impedance
- Output via XL-TC-USBC-LEMO: 3 V p-p, 400 ohm impedance

Timecode Clock

- 0.2 ppm accuracy
- Holds accurate clock for four hours while powered down with batteries inserted, holds for one hour without batteries via internal supercap
- Auto Jams timecode from LTC source via USB-C connector, or from optional PowerStation-8M

Timecode Frame Rates

- 23.98, 24, 25, 29.97 DF, 29.97 ND, 30 DF, 30 ND
- Frame rates are auto-detected from incoming source

USB-C

- Mass Storage (USB-C): USB 2.0 high speed for file transfer
- Powers A20-Mini

Powering

- 3x AAA batteries (Energizer Ultimate AAA Lithium primary batteries recommended), or Sony NP-BX1 rechargeable Li-Ion
- Built-in Li-Ion charger via USB-C (7.5 W or more needed)
- Sony NP-BX1 is rechargeable via optional PowerStation-8M.

Environmental

- Water Resistant
- Operating: -20° C to 60° C, 0 to 90% relative humidity (non-condensing)
- Storage: -40° C to 85° C

Dimensions (H x W x D)

- 75.8 mm x 48 mm x 19 mm
- 2.98 in x 1.88 in x 0.74 in

Weight

- 51 g (without batteries)
- 1.8 oz (without batteries)

Antenna Guide

The A20-Mini ships with an antenna set with three antennas (1 straight 470-548 MHz, 1 straight 548-638 MHz, 1 straight uncut, set of antenna caps).


Sound Devices offers additional pre-cut and uncut antennas as available options.

Attach antennas with a length specific to the frequency in use. Using the wrong length of antenna reduces RF range.

Cutting Antennas to Length

Uncut antennas need to be cut to the length specific to the frequency for intended use.

1. Determine the frequency range intended for the uncut antenna using the Antenna Length chart.
2. Measure the antenna for the cut point. Measurements should begin from the bottom of the SMA connector.
3. Using a pair of cutters, cut the quarter-wave antenna at the specified cut point.
4. Position the antenna cap onto the cut-end of the antenna and push the cap firmly onto the antenna.

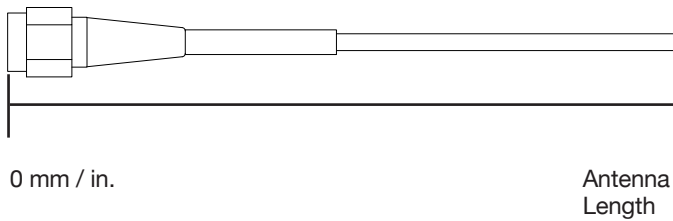

Antenna Length Chart

| # | Frequency Range | Antenna Length in mm | Antenna Length in inches |
|---|-----------------|----------------------|--------------------------|
| 1 | 470 - 548 MHz | 140 mm | 5.51" |
| 2 | 548 - 638 MHz | 120 mm | 4.72" |
| 3 | 638 - 694 MHz | 104 mm | 4.09" |

Use antenna 1, 2, and 3 in the United Kingdom and Europe.
Use antenna 1 and 2 in the United States and Canada.

Legal Notices

Product specifications and features are subject to change without prior notification. Read and fully understand this manual before operation.

Copyright© 2021 Sound Devices, LLC. All rights reserved. This product is subject to the terms and conditions of a software license agreement provided with the product, and may be used in accordance with the license agreement. This document is protected under copyright law. An authorized licensee of this product may reproduce this publication for the licensee's own personal use. This document may not be reproduced or distributed, in whole or in part, for commercial purposes, such as selling copies or providing educational services or support. This document is supplied as a technical guide. Special care has been taken in preparing the information for publication; however, since product specifications are subject to change, this document might contain omissions and technical or typographical inaccuracies. Sound Devices, LLC does not accept responsibility for any losses due to the use of this guide.

LIMITATION ON SOUND DEVICES' LIABILITY. TO THE FULLEST EXTENT PERMITTED BY LAW, SOUND DEVICES SHALL HAVE NO LIABILITY TO THE END USER OR ANY OTHER PERSON FOR COSTS, EXPENSES, DIRECT DAMAGES, INCIDENTAL DAMAGES, PUNITIVE DAMAGES, SPECIAL DAMAGES, CONSEQUENTIAL DAMAGES OR OTHER DAMAGES OF ANY KIND OR NATURE WHATSOEVER ARISING OUT OF OR RELATING TO THE PRODUCTS, THESE TERMS AND CONDITIONS OR THE PARTIES' RELATIONSHIP, INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM OR RELATED TO THE DELETION OR OTHER LOSS OF AUDIO RECORDINGS OR DATA, REDUCED OR DIMINISHED AUDIO QUALITY OR OTHER SIMILAR AUDIO DEFECTS ARISING FROM, RELATED TO OR OTHERWISE ATTRIBUTABLE TO THE PRODUCTS OR THE END USER'S USE OR OPERATION THEREOF, REGARDLESS OF WHETHER SUCH DAMAGES ARE CLAIMED UNDER CONTRACT, TORT OR ANY OTHER THEORY. "CONSEQUENTIAL DAMAGES" FOR WHICH SOUND DEVICES SHALL NOT BE LIABLE SHALL INCLUDE, WITHOUT LIMITATION, LOST PROFITS, PENALTIES, DELAY DAMAGES, LIQUIDATED DAMAGES AND OTHER DAMAGES AND LIABILITIES WHICH END USER SHALL BE OBLIGATED TO PAY OR WHICH END USER OR ANY OTHER PARTY MAY INCUR RELATED TO OR ARISING OUT OF ITS CONTRACTS WITH ITS CUSTOMERS OR OTHER THIRD PARTIES. NOTWITHSTANDING AND WITHOUT LIMITING THE FOREGOING, IN NO EVENT SHALL SOUND DEVICES BE LIABLE FOR ANY AMOUNT OF DAMAGES IN EXCESS OF AMOUNTS PAID BY THE END USER FOR THE PRODUCTS AS TO WHICH ANY LIABILITY HAS BEEN

DETERMINED TO EXIST. SOUND DEVICES AND END USER EXPRESSLY AGREE THAT THE PRICE FOR THE PRODUCTS WAS DETERMINED IN CONSIDERATION OF THE LIMITATION ON LIABILITY AND DAMAGES SET FORTH HEREIN AND SUCH LIMITATION HAS BEEN SPECIFICALLY BARGAINED FOR AND CONSTITUTES AN AGREED ALLOCATION OF RISK WHICH SHALL SURVIVE THE DETERMINATION OF ANY COURT OF COMPETENT JURISDICTION THAT ANY REMEDY HEREIN FAILS OF ITS ESSENTIAL PURPOSE.

The "wave" logo is a registered trademark of Sound Devices, LLC. Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries. Bluetooth LE is a registered trademark of Bluetooth SIG, Inc. Android is a registered trademark of Google. iPad, iPhone, and iOS are registered trademark of Apple Inc. All other trademarks herein are the property of their respective owners.

FCC Conformity



This device complies with part 74 and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

A20-MINI frequency ranges supplied for use in USA:

- 470 to 608 MHz
- 653 to 657 MHz

Warning! Any modifications or changes made to this device, unless explicitly approved by Sound Devices may invalidate the authorization of this device. Operation of an unauthorized device is prohibited under Section 302 of the Communications act of 1934, as amended, and Subpart 1 of Part 2 of Chapter 47 of the Code of Federal Regulations.

FCC & ISED User Statement

This device complies with FCC and ISED RF exposure limits for general population / uncontrolled environments.

Cet appareil est conforme à la norme FCC et ISED les limites d'exposition pour la population générale / l'exposition incontrôlée

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Industry Canada Conformity

This device operates on a no-interference, no-protection basis. Should the user seek to obtain protection from other radio services operating in the same TV bands, a radio licence is required. For further details, consult Innovation, Science and Economic Development Canada’s Client Procedures Circular CPC-2-1-28, Voluntary Licensing of Licence-Exempt Wireless Microphones in the TV Bands.

This radio transmitter 22225-9295 has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

The transmitter is supplied with the above unique antenna types; to replace a lost, damaged or faulty antenna, please contact Sound Devices, LLC.

| Part # | Manufacturer | Description | Maximum Gain | Impedance |
|--------|--------------------|--|--------------|-----------|
| 11224 | Sound Devices, LLC | Antenna straight 470-548 MHz (140 mm / 5.51 “) | +2.15 dBi | 50 ohms |
| 11225 | Sound Devices, LLC | Antenna straight 548-638 MHz (120 mm / 4.72 “) | +2.15 dBi | 50 ohms |

This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Conformité à Industrie Canada

Cet appareil opère selon un régime de non-brouillage et de non-protection. Si l'utilisateur veut obtenir une protection par rapport aux autres services radio opérant sur les mêmes bandes TV, une licence radio est requise. Pour plus de détails, veuillez consulter le circulaire de procédures client CPC-2-1-28 Délivrance de licences sur une base volontaire pour les microphones sans fils exempts de licence exploités dans les bandes de télévision, publié par Innovation, Sciences et Développement économique Canada.

Ce transmetteur radio 22225-9295 a été approuvé par Innovation, Sciences et Développement économique Canada pour opérer avec les types d’antennes listés ci-dessous, avec gain maximum permissible indiqué. Les types d’antennes non inclus dans cette liste et dont le gain excède le gain maximum indiqué sur n’importe quel type listé ci-dessous sont strictement prohibés d’utilisation avec cet appareil.

Ce transmetteur est fourni avec les types d’antenne unique ci-dessus; pour remplacer une antenne perdue, endommagée ou défectueuse, veuillez contacter Sound Devices, LLC.

| # Pièce | Manufacturier | Description | Gain Maximum | Impédance |
|---------|--------------------|--|--------------|-----------|
| 11224 | Sound Devices, LLC | Antenne droite 470-548 MHz (140 mm / 5.51 “) | +2.15 dBi | 50 ohms |
| 11225 | Sound Devices, LLC | Antenne droite 548-638 MHz (120 mm / 4.72 “) | +2.15 dBi | 50 ohms |

Cet appareil est conforme aux normes CNR exemptes de licence d’Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- 1) ce dispositif ne peut pas causer d’interférences, et
- 2) ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l’appareil.

WEEE Statement



If you wish to discard a Sound Devices product in Europe, contact Sound Devices (England) for further information.

Battery Advisory

Incorrect use of batteries poses a danger of explosion. Replace only with the same or equivalent type. Properly recycle batteries. Do not crush, disassemble, incinerate, dispose in a fire or expose batteries to high temperatures.

Declaration of Conformity

Manufacturer's Name: Sound Devices, LLC
Manufacturer's Address: E7556 State Road 23 and 33
Reedsburg, WI 53959 USA

We, Sound Devices LLC, declare under our sole responsibility that the product:

Product Name: A20-Mini
Model Number: 9295
Description: Digital Wireless Microphone Transmitter

is in conformity with the essential requirements of the following relevant Union harmonisation legislation:

Radio Equipment Directive (RED) 2014/53/EU
Low Voltage Directive 2014/35/EU
RoHS Directive 2011/65/EU

The following harmonised standards and/or normative documents were applied:

Health & Safety (Article 3.1(a) of RED) EN 62368-1:2014
EN 50566:2017

EMC (Article 3.1(b) of RED) EN 301-489-1 v2.2.3:2019
EN 301-489-9 v2.1.1:2019
EN 301-489-17 v3.2.4:2020

RF Spectrum (Article 3.2 of RED) EN 300 422-1 v2.1.2:2017
EN 300 328 v2.2.2:2019
EN 300 440 v2.1.1:2017

Signed for and on behalf of Sound Devices LLC:

July 20th, 2021

Date



Matt Anderson - Sound Devices, LLC President

Servicing the A20-Mini

Do not attempt to service the A20-Mini. The case is water-sealed and needs to have new gaskets installed if taken apart. The internal parts are microscopic and not user serviceable. Please send to Sound Devices for any service needs.

<https://service.sounddevices.com/contact-support/>

Warranty

Sound Devices, LLC warrants the items listed above against defects in materials and workmanship for a period of ONE (1) year from date of original retail purchase. Users who register their product directly with Sound Devices Technical Support using the online form or by phone, will receive an additional ONE (1) year of warranty coverage, extending the complete warranty period to TWO (2) years from the date of original retail purchase. In order to extend the warranty coverage period, registration must be completed within the initial ONE (1) year warranty period. Products must be purchased through authorized Sound Devices resellers to qualify for Warranty coverage. Damage resulting from the opening of a Sound Devices product or attempted repairs by a non-authorized Sound Devices repair technician will void warranty coverage.

This is a non-transferable warranty that extends only to the original purchaser. Sound Devices, LLC will repair or replace the product at its discretion at no charge. Warranty claims due to severe service conditions will be addressed on an individual basis.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE. SOUND DEVICES, LLC DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOUND DEVICES, LLC IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY. Because some jurisdictions do not permit the exclusion or limitations set forth above, they may not apply in all cases.

For all service, including warranty repair, please contact Sound Devices for an RMA (return merchandise authorization) before sending your unit in for repair. Product returned without an RMA number may experience delays in repair. When sending a unit for repair, please do not include accessories, including SSD drives, CF cards, batteries, power supplies, carry cases, cables, or adapters unless instructed by Sound Devices. Sound Devices repairs and replacements may be completed using refurbished, returned or used parts that have been factory certified as functionally equivalent to new parts.

Sound Devices, LLC

Services Repair RMA #XXXXX

E7556 State Road 23 and 33
Reedsburg, WI 53959 USA
Telephone: +1-608-524-0625

Included Accessories

The A20-Mini includes the following accessories.

- **Antenna set** (1 straight 470-548 MHz, 1 straight 548-638 MHz, 1 straight uncut, 3 antenna caps)
- **A20-Mini Holster**

User Guide Revision List

This document is distributed by Sound Devices, LLC in Online electronic (PDF) format only. Published in the USA.

| Date | Description |
|---------------|---|
| July 2021 | v1.00, initial release |
| August 2021 | v1.10, updates to A20-Remote A20-Mini Status indicators and Identify mode. Added sections Reordering the Transmitter List and Warranty. |
| October 2021 | v2.00 Added Group Control, LEDs menu, Resume record state upon powering on. |
| December 2021 | SD-Utility v2.00 Combine to Poly, adding pre- and post-roll to Conform to CSV, organizing source files, and more |
| April 2022 | Modulation Menu, A20-Remote Group Menu, and A20-Remote layout changes |

SOUND  **DEVICES**

Post Office Box 576
E7556 State Rd. 23 and 33
Reedsburg, Wisconsin 53959 USA

support@sounddevices.com

+1 608.524.0625 main
800.505.0625 toll free (U.S. only)

www.sounddevices.com